

# Amantii Remote Control Guide

10105041 (R41)



1st generaton WMBI

10105041(R41)

10105051 (XR51)



2015  
WM-BI-26-3623  
WM-BI-34-4423  
WM-BI-48-5823  
WM-BI-72-8123

LRC10B-01  
(6010092)

10105058 (R58)



2015  
WM-BI-26-3623-WHTGLS  
WM-BI-34-4423-WHTGLS  
WM-BI-48-5823-WHTGLS  
WM-BI-72-8123-WHTGLS

LRC10-B-03  
(601092C)

1010502 (XR52)



2015  
ZECL-26-2923  
ZECL-26-2923-FLUSHMT  
ZECL-30-3226  
ZECL-30-3226-FLUSHMT  
ZECL-33-3624  
ZECL-39-4134  
ZECL-2939  
INSERT-26-3825  
INSERT-30-4026  
INSERT-33-4230  
BI-50-FLUSHTMT

LRC16-02(601097)

10105057 (R57)



2015  
ZECL-26-2923-WHTGLS  
ZECL-30-3226-WHTGLS  
ZECL-39-4134-WHTGLS  
INSERT-30-4026-WHTGLS  
BI-50-FLUSHTMT-WHTGLS  
BI-FI-50-FLUSHMT-BLKGLS

LRC10B-03(601092C)

LRC16-03(601097B)

10105063 (R63)



2016  
WM-FM-26-3623-BG  
WM-FM-34-4423-BG  
WM-FM-48-5823-BG  
WM-FM-60-7023-BG  
WM-FM-72-8123-BG  
WM-FM-88-10023-BG  
BI-40-DEEP  
BI-50-DEEP  
BI-60-DEEP  
BI-72-DEEP  
BI-88-DEEP

LRC06-03(601097B)

LRC01B-03(601092C)

10105064 (R64)



2016  
ZECL-26-2923-BG  
ZECL-26-2923-FLUSHMT-BG  
ZECL-30-3226-BG  
ZECL-30-3226-FLUSHMT-BG

2016  
ZECL-33-3624-BG  
ZECL-39-4134-BG  
ZECL-2939-BG  
INSERT-26-3825-BG  
INSERT-30-4026-BG  
INSERT-33-4230-BG  
WM-FM-50-BG  
BI-40-SLIM  
BI-50-SLIM  
BI-60-SLIM  
BI-72-SLIM  
BI-88-SLIM

LRC16-03(601097B)

LRC10B-03(601092C)