

Change Fan



Advanced Series Models:

WM-BI-28-3421-BLKGLS, WM-BI-43-5123-BLKGLS, WM-BI-58-6421-BLKGLS
WM-BI-76-8221-BLKGLS, WM-BI-106-11524-BLKGLS

Amantii

1. Remove log



log

Log PCB
position

Remove the log carefully and to unplug the log PCB wire

 
2. Remove front panel and glass



panel

Remove panel 7 screws

Remove panel and glass



3. Remove color glass and side cover



Remove side cover screws




Remove color glass and side covers.

4. Remove air outlet cover and fan



Remove air outlet cover screws

Unplug the fan wires

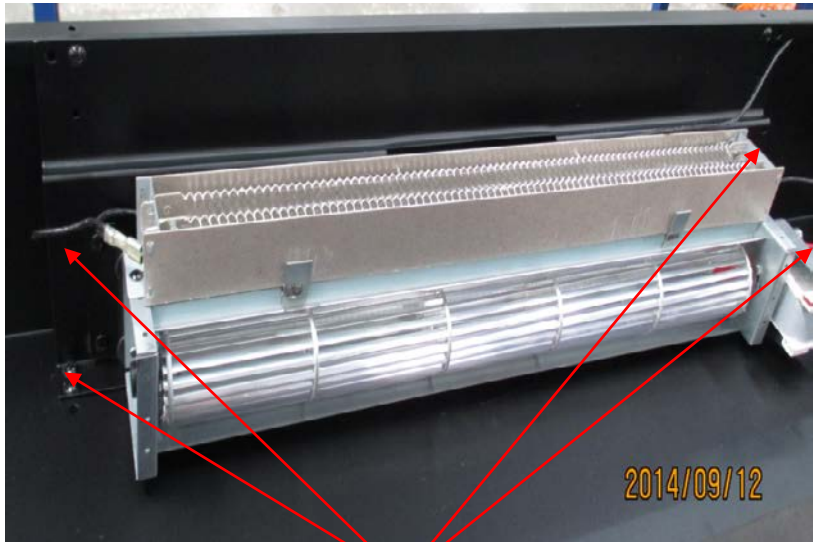


Remove fan mounting screws



5. Change fan



Take out the heater and unscrew the fan

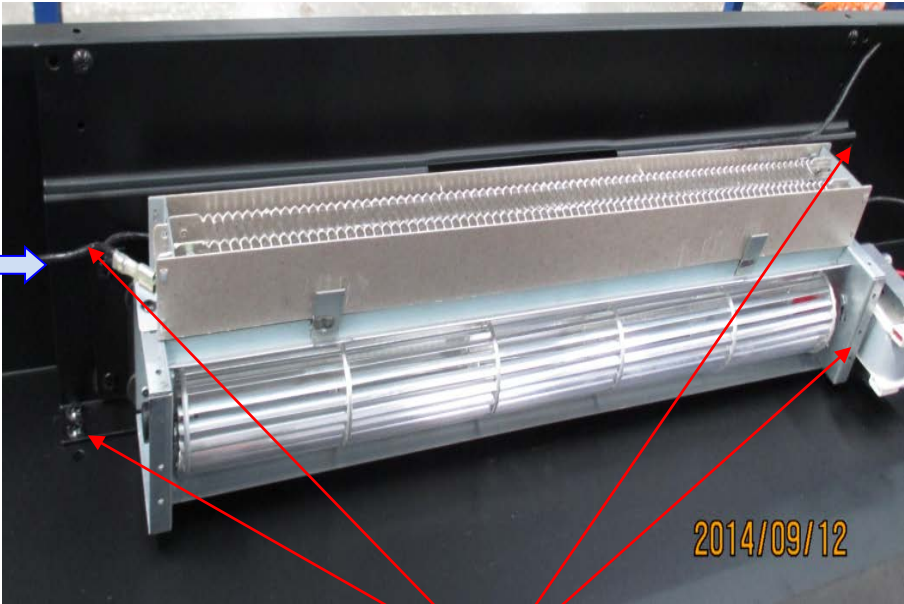

Install new fan to mounting plate and connect the wires

6. Put back the side cover, color glass and air outlet cover



Fix the screws
to air outlet
cover




Fix the screws
to side covers



Install the glass in place

7. Install front panel and glass

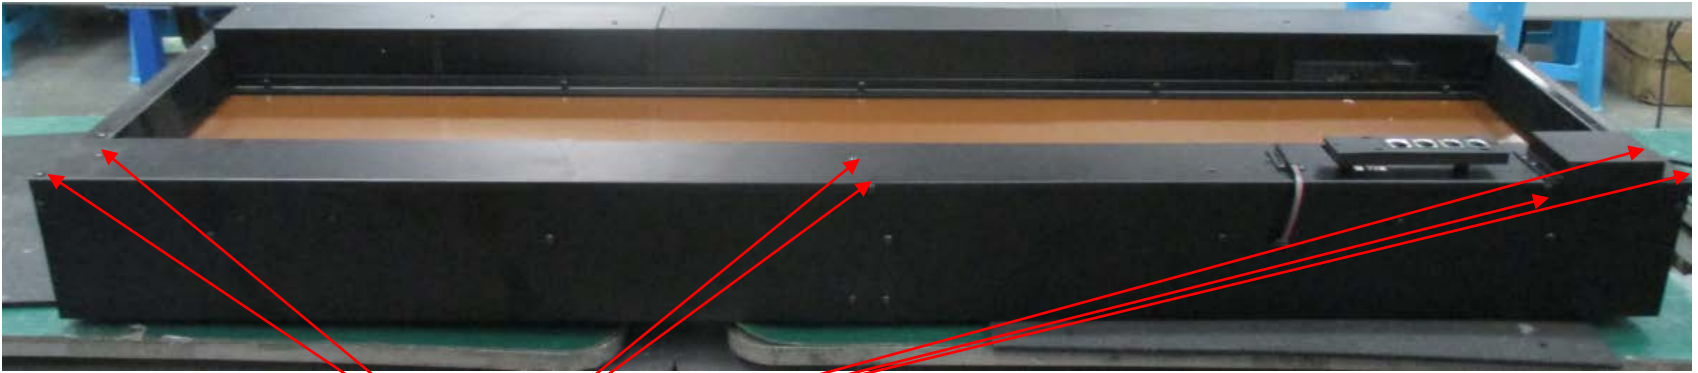

Fix the front
panel by screws



Install the front glass.
Put back the log and connect the log PCB wires.