

Replace Main PCB (4738)



Advanced Series Models:

WM-BI-28-3421-BLKGLS, WM-BI-43-5123-BLKGLS, WM-BI-58-6421-BLKGLS
WM-BI-76-8221-BLKGLS, WM-BI-106-11524-BLKGLS

Amantii

1. Remove the log



Log

Log PCB

Take out the log carefully and to unplug the log PCB wire.

Amantii

 
2. Remove front panel & glass



Front panel

Remove front panel 7 screws


Take away the front glass



3. Remove color glass



 Remove side glass
panel screws




Remove side glass and
the color glass panel





Amantii


4.Remove airlet cover to change PCB

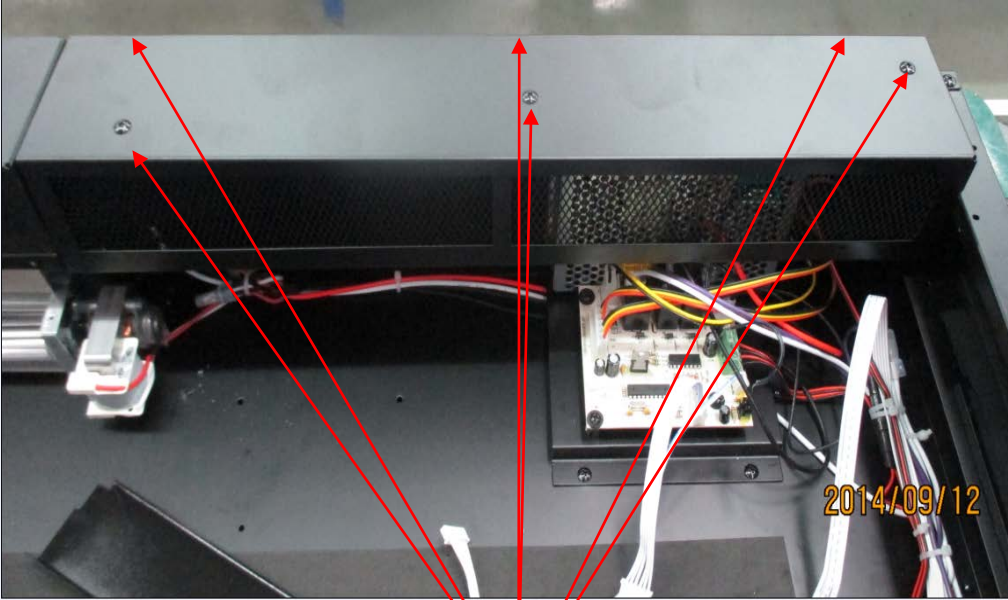

Remove front airlet screws

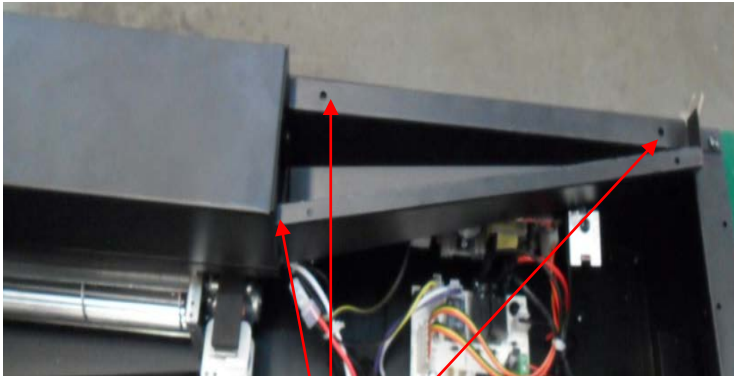 


Remove left airlet screws


 


- 1. Unplug the PCB wire
- 2. Remove PCB board screws to take out the PCB to change new PCB

5.Install back the airlet cover

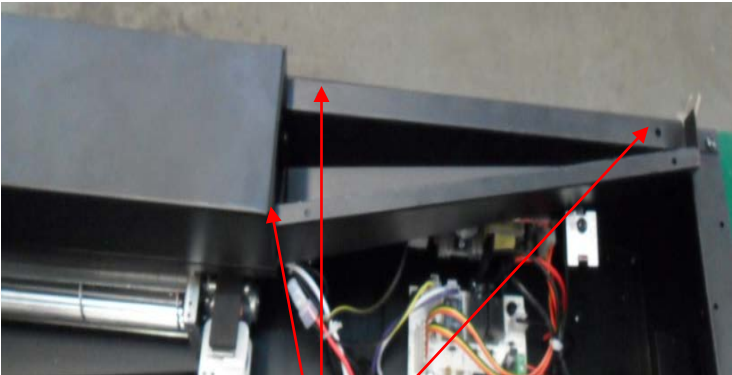

Put back the left inlet

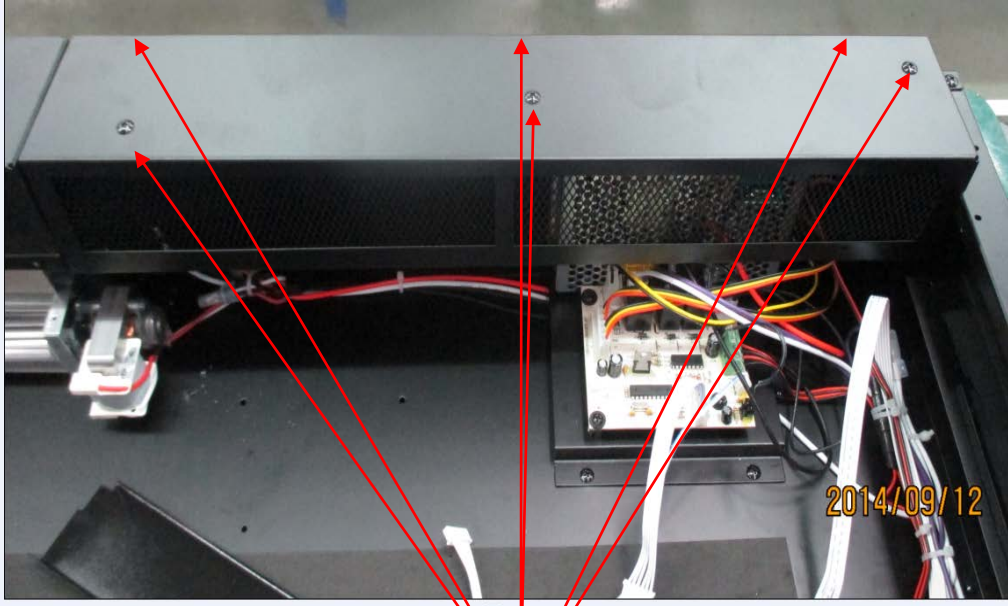 


Put back the screws

6.Put back color glass



Put back the side screws

7. Install back the front glass and panel

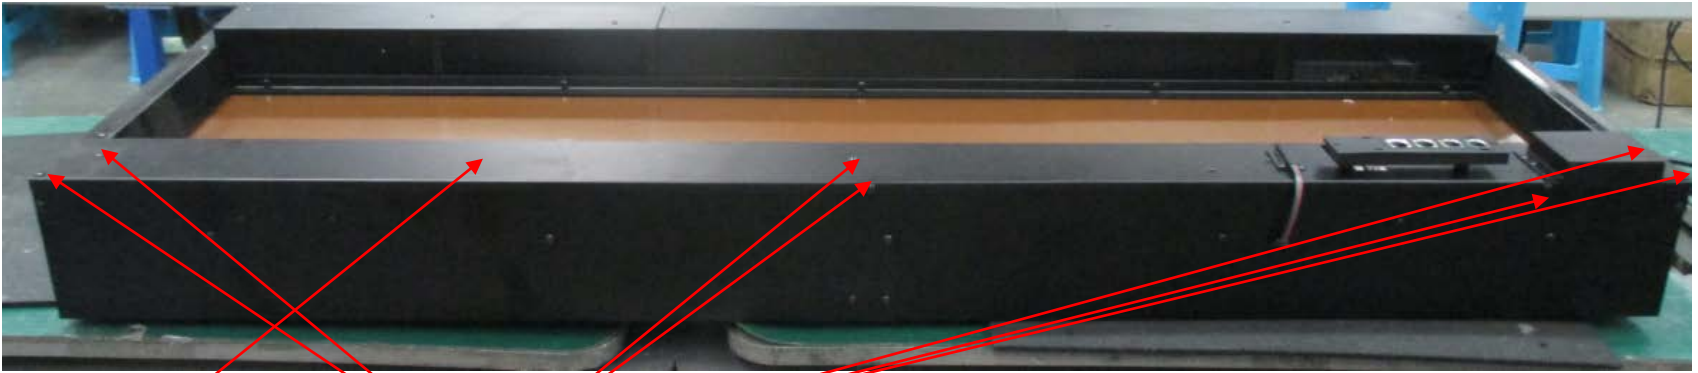

Front
panel

Tighten the screws



1. Put back the log
2. Plug the log wire in place