

Change the PCB Board  
WM-BI Enhanced Series

*Amantii*



Models: WM-BI-26-3623, WM-BI-34-4423, WM-BI-5823, WM-BI-72-8123

1. Carefully remove the front glass surround.  
Unscrew two screws at both sides to remove the surround.



*Amantii*

2. Unscrew and take off the bottom front bracket. You can see the PCB board at the bottom.



*Amantii*

3. Unscrew screws on the plastic part.  
Make note of the wire locations or take a photo.  
Unplug the wires and take off the PCB board.



*Amantii*

4. Plug all the wires back according to your notes or photo.  
Place the reattached board gently inside the unit and replace the back panel.



*Amantii*

5. Plug the power cord in to test the unit.  
Then put the fireplace back to the wall.



*Amantii*