

01. INSTALLATION / OWNERS MANUAL



SIGNATURE



MODEL SKU:

TRV-55-SIG

TS2210055-1

TRV-75-SIG

TS2210075-1

SAFETY INFORMATION



WARNING

If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other.



CONSUMER: RETAIN THIS MANUAL FOR FUTURE REFERENCE.

256438

INSTALLER: LEAVE THIS MANUAL WITH THE APPLIANCE.



WARNING: This product can expose you to chemicals including lead in the wiring, which is [are] known to the State of California to cause birth defects or other reproductive harm. For more information visit: www.p65warnings.ca.gov

www.amantii.com



TABLE OF CONTENTS

Please read and carefully follow all of the instruction found in this manual. The instructions included here will assure that you have many years of dependable and enjoyable service from your Amantii Electric Fireplace.

IMPORTANT INSTRUCTIONS	03
CAUTIONS	04
FCC CAUTIONS	05
UNPACKING AND TESTING APPLIANCE	06
LOCATING THE FIREPLACE	06
PRODUCT SPECIFICATION	07
HARDWIRE INSTALLATION	08
INSTALLATION	10
SIDE BY SIDE INSTALLATION	13
MEDIA INSTALLATION	15
CASSETTE INSTALLATION	17
MANUAL OPERATION	19
REMOTE CONTROL OPERATION	20
WIFI OPERATION	23
HOW TO PAIR YOUR BLUETOOTH SPEAKERS	25
TROUBLE SHOOTING	26
EXPLODED VIEW	27
WIRING DIAGRAM	28
ELECTRIC FIREPLACE WARRANTY	29

IMPORTANT INSTRUCTIONS

1. Read all instructions before installing or using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet from the front, sides and rear of the heater.
3. Always unplug heater when not in use.
4. Do not operate the fireplace if it has a damaged cord or plug, after it has malfunctioned, or if the unit has been dropped or damaged in any way.
5. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners or anything else. Arrange the cord away from traffic areas where it could not be tripped over.
6. To disconnect the heater, turn the controls to "OFF" before removing the plug from the outlet.
7. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the heater.
8. To prevent a possible fire, do not block air intakes in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
9. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
10. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury.
11. Avoid the use of an extension cord, the extension cord will overheat and cause a fire. This heater is not to be used with an extension cord.
12. Always use properly grounded fused and polarized outlets.
13. Always use ground fault protection where it is required by electrical codes.
14. Always disconnect the power before performing any cleaning, maintenance or relocation of the heater.
15. To prevent a possible fire, do not burn wood or other materials in this heater.
16. To prevent electric shock or fire, always use a certified electrician, should new circuits or outlets be required.
17. When transporting or storing the heater, keep it in a dry place, free from excessive vibration.
18. This appliance should not be modified under any circumstances.
19. Packaging material should be kept away from children and be disposed of in a safe manner. Plastic bags are not toys and should be kept away from children and infants.
20. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
21. If the glass is damaged, do not use the heater in order to avoid a hazard.
22. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
23. The heater may include an audible or visual alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds (or illuminates), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may have blocked the airflow or otherwise caused high temperatures to have occurred. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (OR ILLUMINATING).
24. Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.

CAUTIONS

Do's	Always install the heater in accordance with this guide. If in doubt obtain expert advice.
	Always make sure the electrical socket is accessible and located adjacent to, but not above the heater.
	Always disconnect the heater from the electrical supply before moving it, or carrying out cleaning, maintenance.
	Always make sure the heater is firmly secured to prevent it from being tipped over.
	Always use a fireguard when young children and infirm persons can come into contact with the heater.
Don'ts	Never leave children unsupervised in a room where the heater is ON and unguarded.
	Never obstruct or cover the fan outlet or force items into heater openings.
	Never use aerosols or steam cleaners on or around the heater.
	Never route the main supply cable under carpet etc.
	Never install the heater close to curtains or combustible materials.
	Never use the heater to dry clothes etc.
	Never sit or stand on the heater.

FCC CAUTIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference wil not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an cexperienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and opeated with minimum distance 20cm between the radiator & your body.

UNPACKING AND TESTING APPLIANCE

Carefully remove the appliance from the box.

Test all aspects of its operation (manual switches, remote and heater) to make sure all components are operating correctly.

As with most electronic devices, your new electric fireplace has been designed to operate at temperatures between 5 °C (41 °F) and 35 °C (95 °F). During the cold winter months, allow the fireplace to reach room temperature before turning it on.

NOTE: There may be a trace of odor during the first few minutes of initial use. This is harmless, normal and will never occur again.

LOCATING THE FIREPLACE

Plan where to locate and frame the fireplace. This will save time and money later when you install the fireplace. Before installation consider the following:


1. Where the fireplace is located must allow for wall and ceiling clearances.
2. Consider a location where the fireplace screen will not be exposed to direct sunlight from windows or doors.
3. A 20 ampere, 120 Volt, 60 Hz branch circuit with proper ground must be available at the location. Preferably a dedicated branch circuit should be provided to avoid circuit breakers to trip or fuses to blow.

PRODUCT SPECIFICATION

This appliance has been tested in accordance with the UL Standard 2021 for fixed and location dedicated electric room appliances in the United States and Canada. If you need assistance during installation, please contact your local dealer.

NOTE: This appliance must be electrically wired and grounded in accordance with local codes. In the absence of local codes, use the current CSA C22.1 Canadian Electrical Code in Canada or the ANSI/NFPA 70 National Electrical Code in the United States.

Product model	TS2210055-1 TRV-55-SIG		TS2210075-1 TRV-75-SIG	
Voltage	120V AC 60Hz	240V AC 60Hz	120V AC 60Hz	240V AC 60Hz
Watts	1500W	3000W	1500W	3000W
Appliance size (W x H x D)	56 1/4" x 37 3/4" x 22" 142.9 x 96 x 56 cm		76 1/4" x 37 3/4" x 22" 193.7 x 96 x 56 cm	
Glass Viewing (W1 x H1)	55" x 22" 139.7 x 55.9 cm		75" x 22" 190.5 x 55.9 cm	

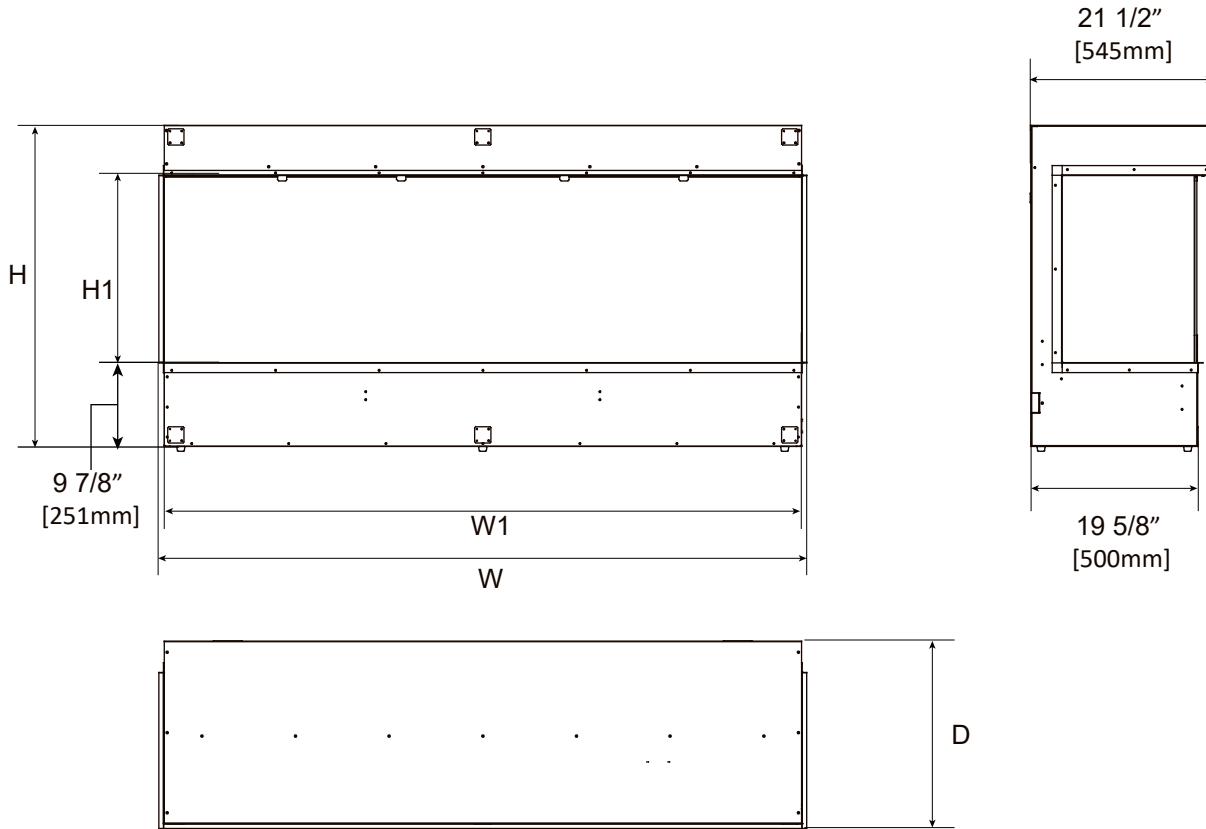

HARDWIRE INSTALLATION

Turn off the appliance completely and let cool before servicing. Only a qualified service person should service and repair this electric appliance.


If it is necessary to hardwire this appliance, a qualified electrician must remove the cord connection, and wire the appliance directly to the house hold wiring.

This appliance must be electrically connected and grounded in accordance with local codes, if hardwired. In the absence of local codes, use the current CSA C22.1 CANADIAN ELECTRICAL CODE in Canada or the current ANSI/NFPA 70 NATIONAL ELECTRICAL CODE in the United States.


These appliances have two types of hardwired. Connect to 120V or 240V.

Connect to 120V

1. Remove the cover plate from the lower right corner on the back of the fireplace by removing the four screws, as shown below. Pierce wire grommet with a knife.

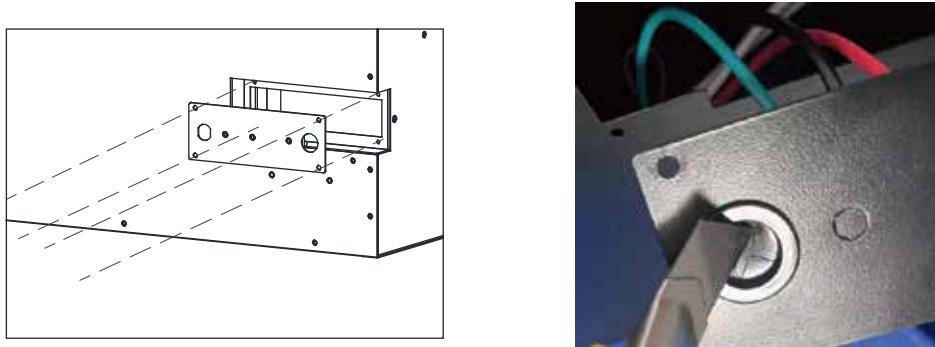


2. Attach the wiring to the junction block. Please make sure the live wire goes into the "L", the neutral wire into "N" and the ground wire into "G".

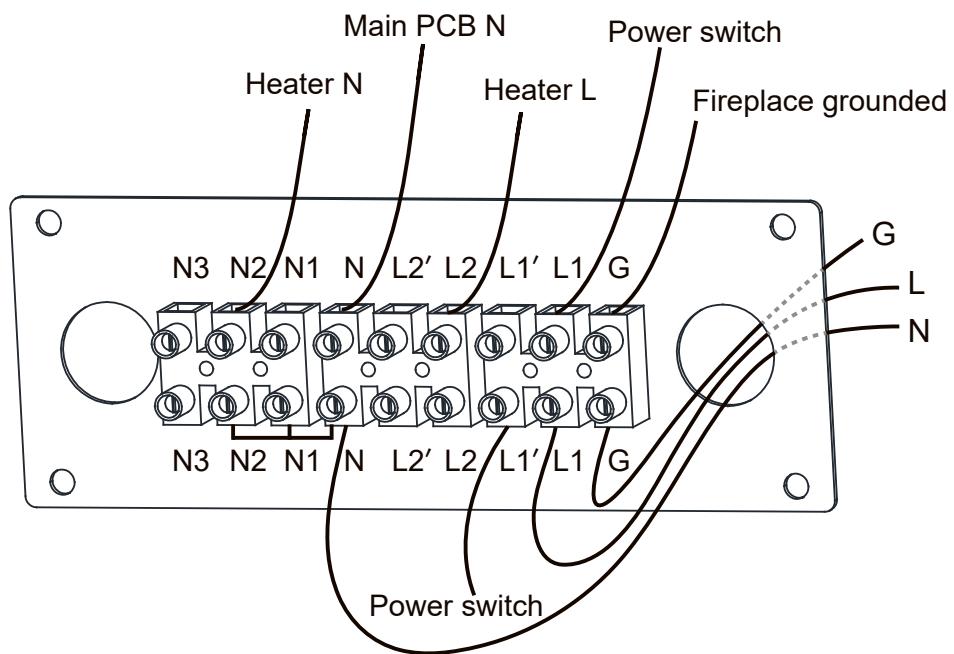


3. Return the cover plate to the lower right corner on the back of the fireplace and screw the four screws back in to fasten the plate.

Connect to 240V

1. Remove the cover plate from the lower right corner on the back of the fireplace by removing the four screws as shown below. Pierce wire grommet with a knife.

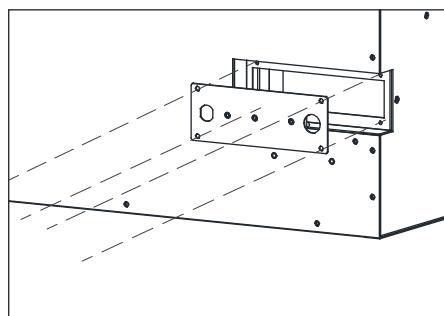

2. Attach the wiring to the junction block. Please make sure the live wire goes into the "L", the neutral wire into "N" and the ground wire into "G".

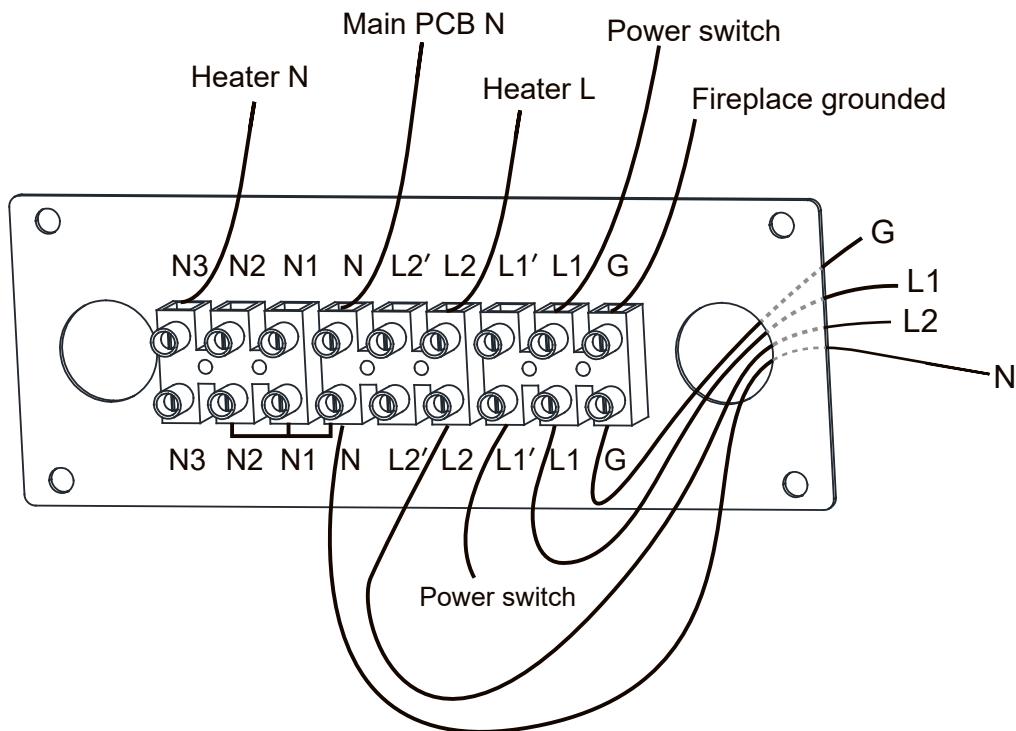

3. Return the cover plate to the lower right corner on the back of the fireplace and screw the four screws back in to fasten the plate.

INSTALLATION


The TRV SIGNATURE models are designed to be built-in and allow for the finishing material (drywall, stone, tile, etc) to be built right down to the glass edge.

NOTE: Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance.


The wall opening size of the fireplace:

	W	D ₁	D ₂	H
TRV-55-SIG	55 1/4" 140.2 cm	19 3/4" 50.0 cm	21 1/2" 54.5 cm	38.0" 96.6 cm
TRV-75-SIG	75 1/4" 191 cm	19 3/4" 50.0 cm	21 1/2" 54.5 cm	38.0" 96.6 cm

NOTE: The wall opening size is suitable for fireplace without adjustable leveling feet.

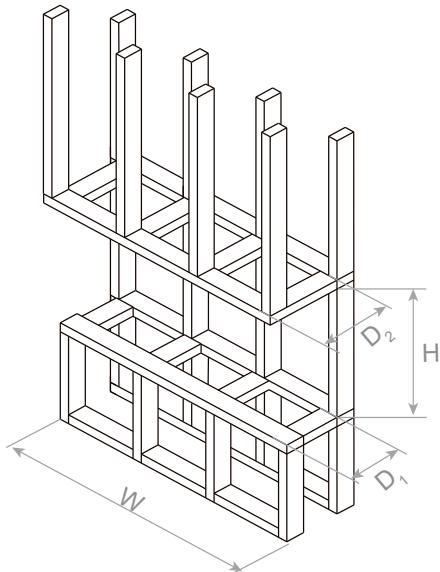


1. Product is fixed with fending bars and panels on the left and right side.

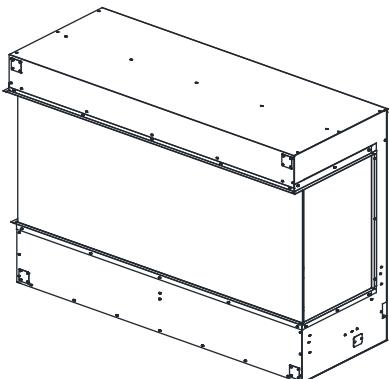


2. To view the flame from different angles, you need to remove panels from different sides.


(1). Remove both sides of the fending panels if you want to view the flame from three angles.

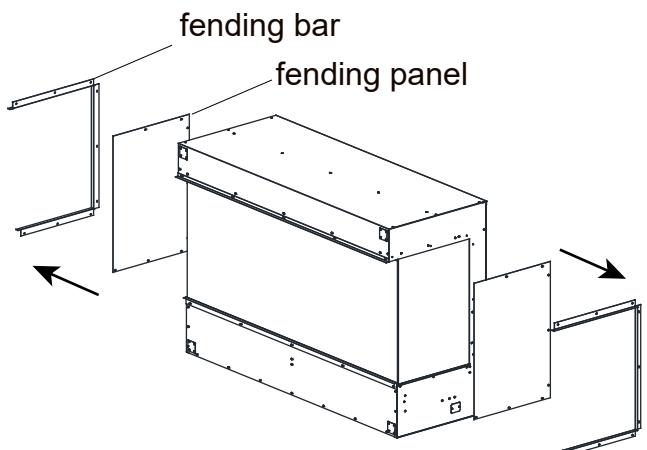


(2). Remove the fending panel on the left side if you want to view the flame from front and left side.

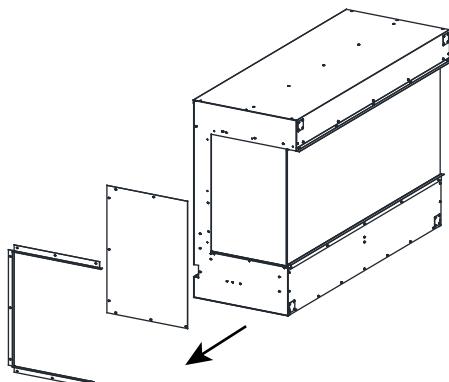


(3). Remove the fending panel on the right side if you want to view the flame from front and right side.

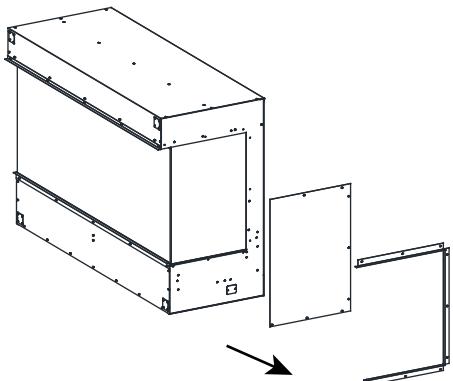


3. Screw back the fending bar after the panel is removed.

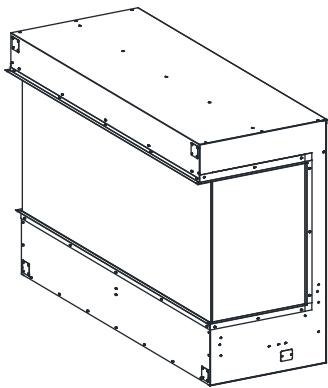


4. Remove the framing plates from the fireplace and save for step 6.

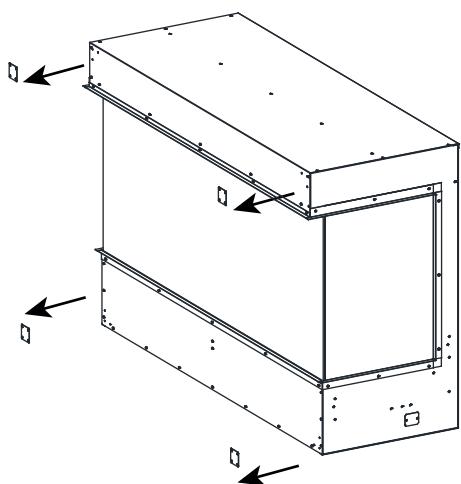

5. Make an opening for the fireplace according to requested measurement.

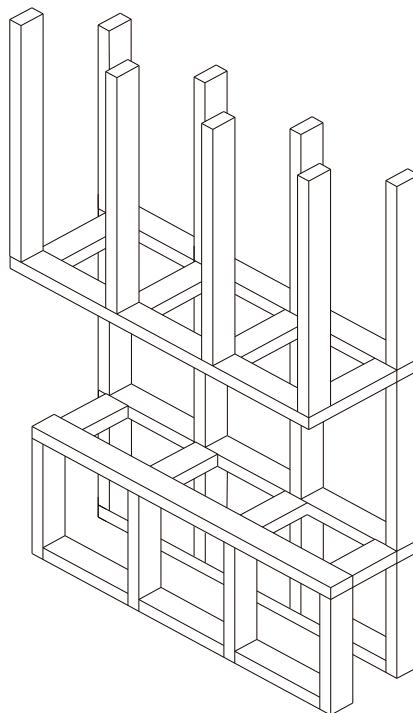


6. Insert the fireplace into the wall opening. Drive the mounting screws into the frame plates on the unit and the wall studs. To fix the bottom of the fireplace and the wall studs with the framing plates that you've removed from the fireplace at STEP 4. Plug in and check if the fireplace works.

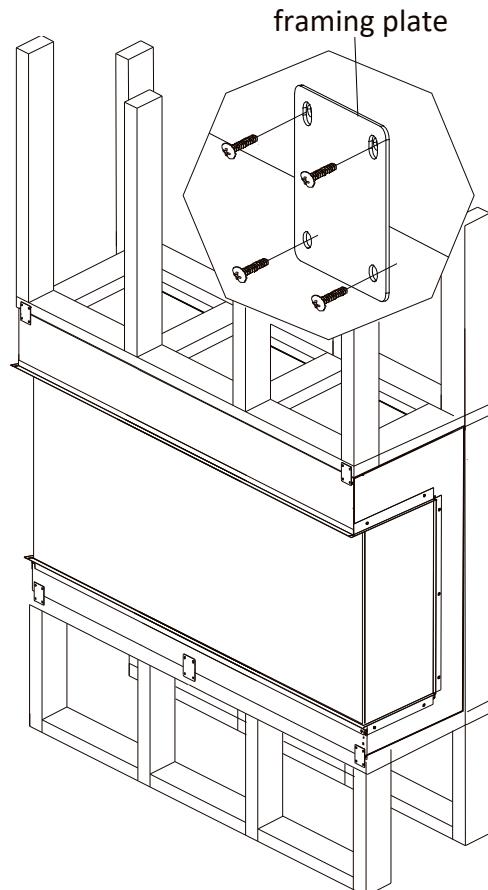


7. After checking that the fireplace operates properly, cover the glass panels with protective plastic bag and install plywood or drywall.



Three angles viewing

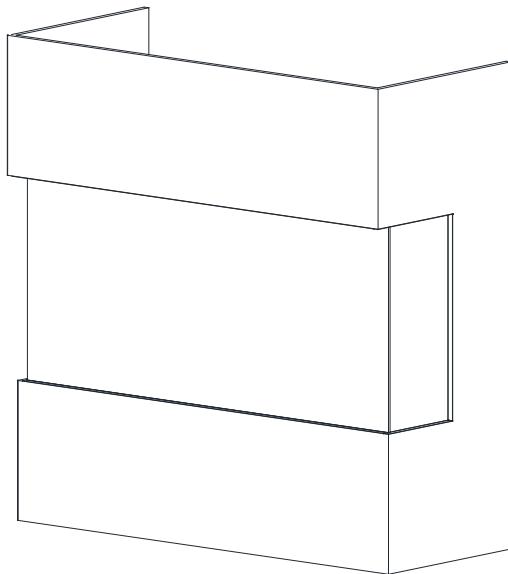

Front and right side viewing

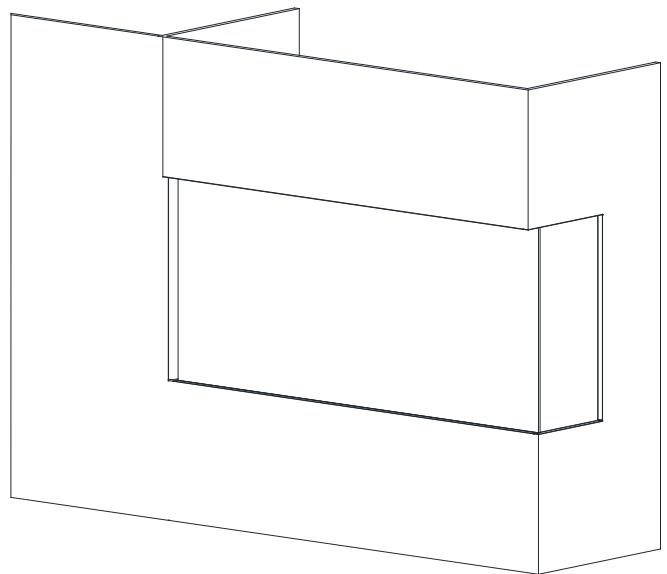


Front and left side viewing

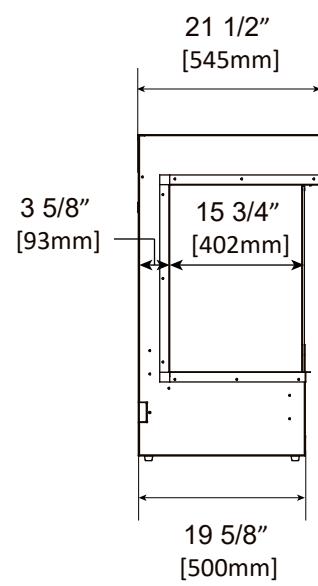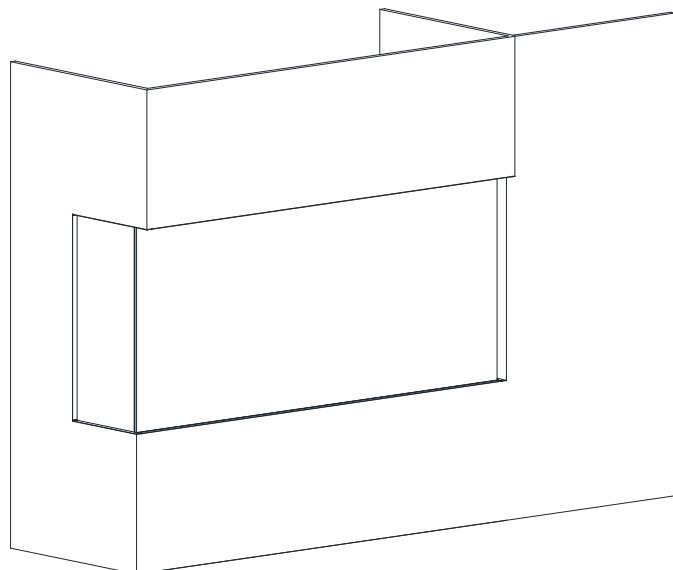


SIDE BY SIDE INSTALLATION


1. Unscrew 7 screws on the right side that fix the fending bar and panel, and then take off the fending bar and panel.

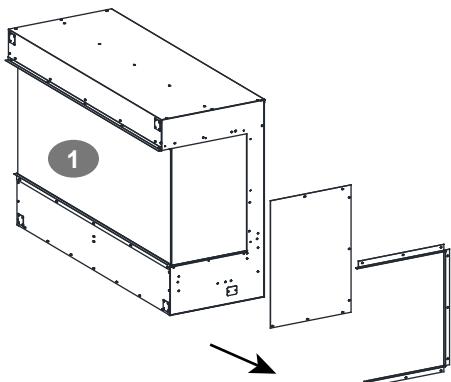


2. Unscrew 2 screws (The quantity varies depending on the size of the unit) and remove the front glass bracket which are fending the front glass.

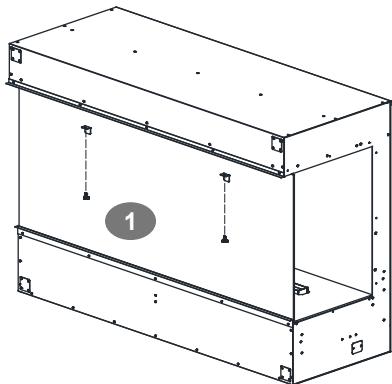


3. Take off the front glass and put it in safe place.

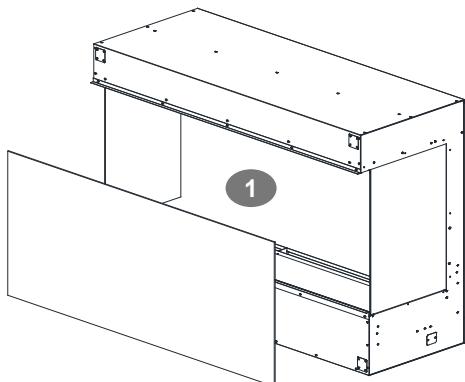


4. Unscrew 2 screws and remove the brackets which are fending the right side glass.

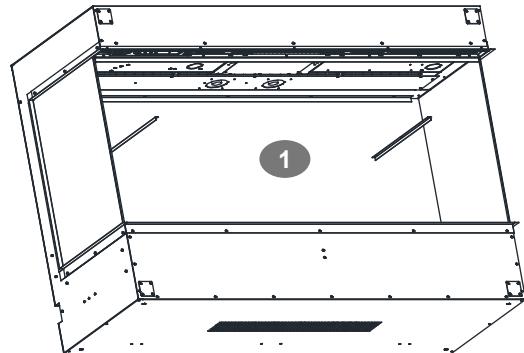


5. Remove the right side glass and take off the bracket.

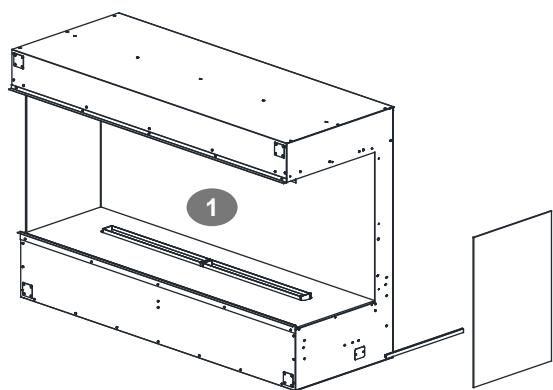

6. Remove the front glass, left side fending bar, fending panel, left glass and brackets from the other one in the same way.

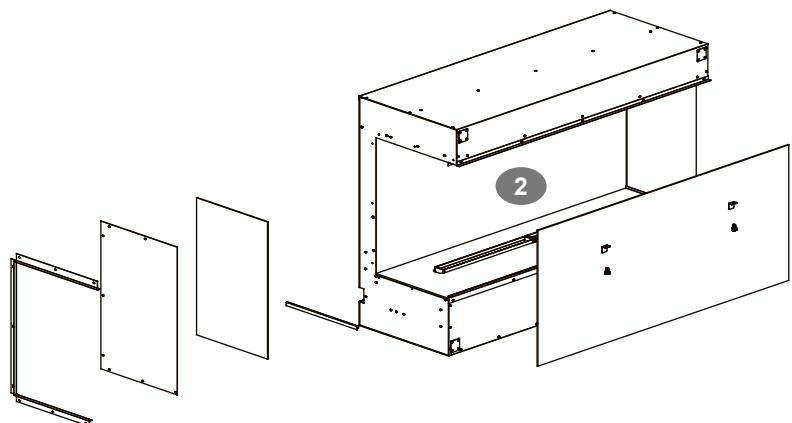


7. Place fireplace 1 and fireplace 2 on the same level, and place the right side of fireplace 1 close to the left side of fireplace 2.

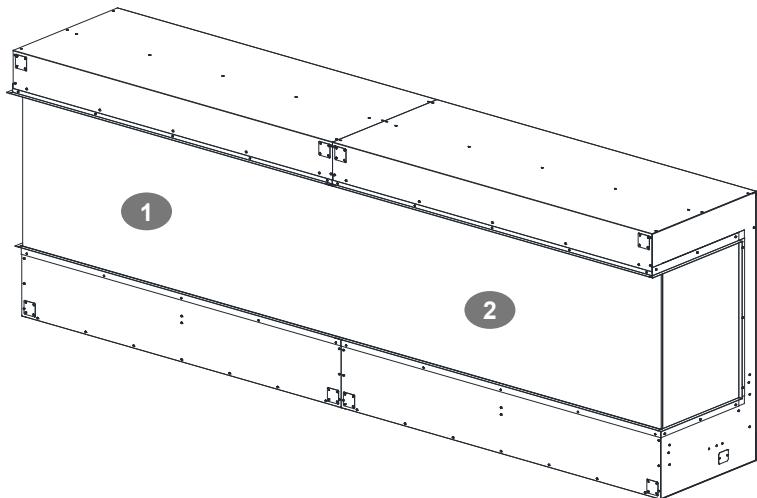


8. Unscrew the 8 screws at the joint, then remove the 2 framing plates from the fireplace 1 and fix them as the picture shows.

NOTE: After removing the framing plates on the fireplace 1, screw back the screws.

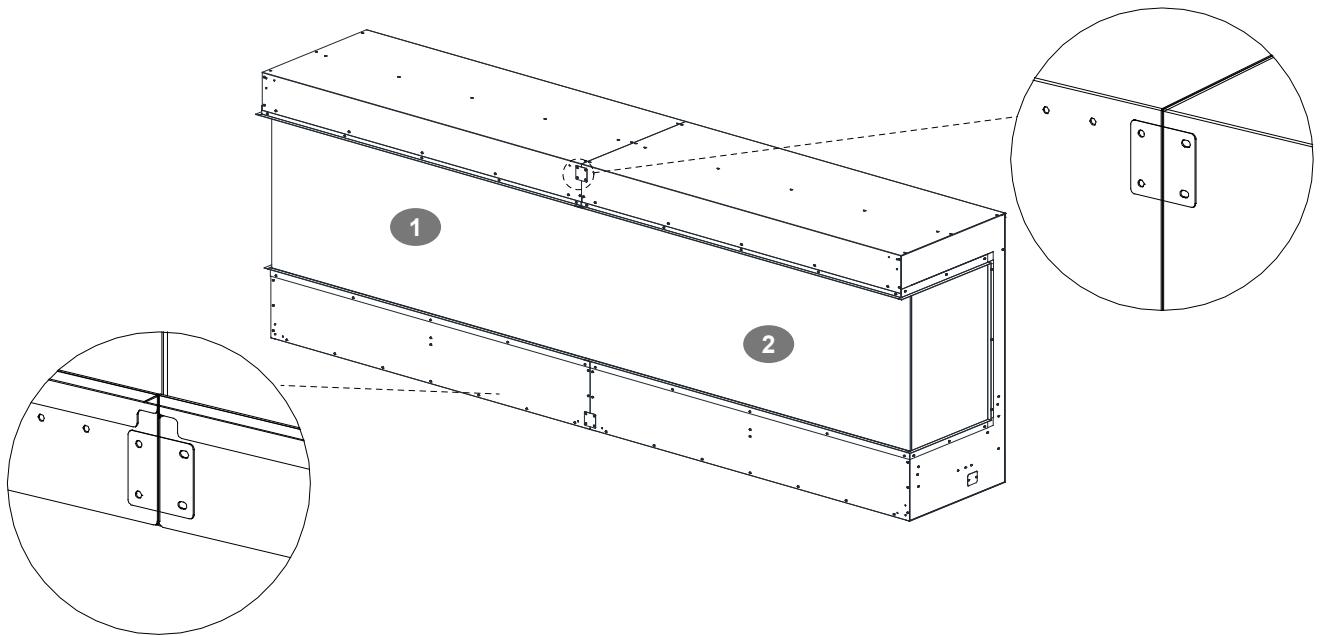


9. Put back the front glass to the fireplaces and secure them with screws and front glass brackets.

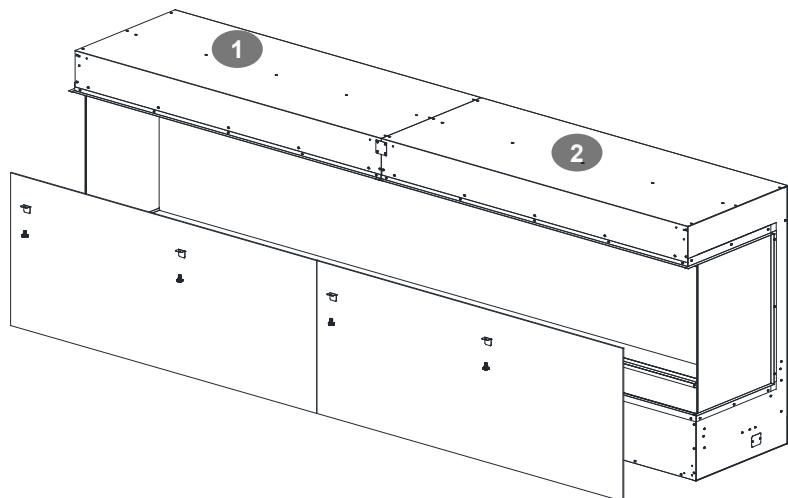


MEDIA INSTALLATION


1. Unscrew 2 screws (The quantity varies depending on the size of the unit) and remove the bracket which are fending the front glass panel.

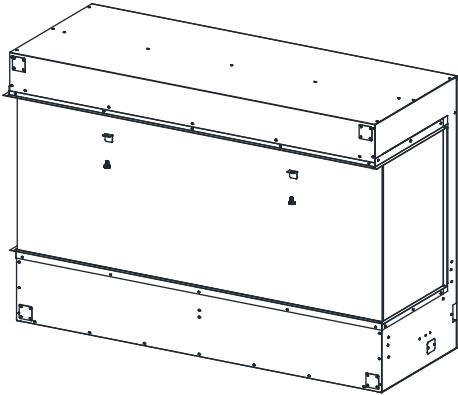


2. Take off the front glass panel and put it in safe place.

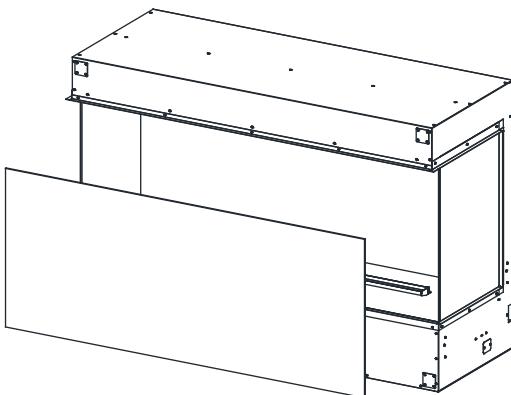


3. Unscrew 4 screws and remove the brackets which are fending the left and right side glass.

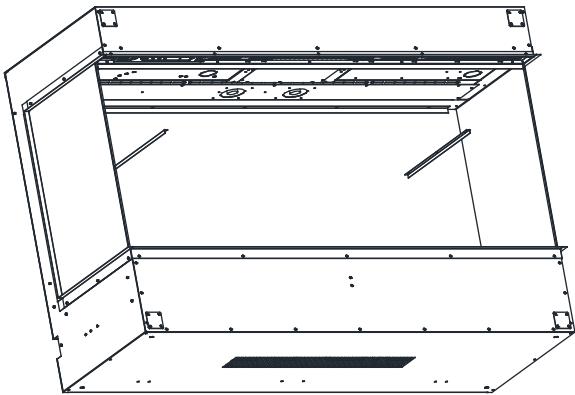


4. Remove the left and right side glass and take off the brackets.

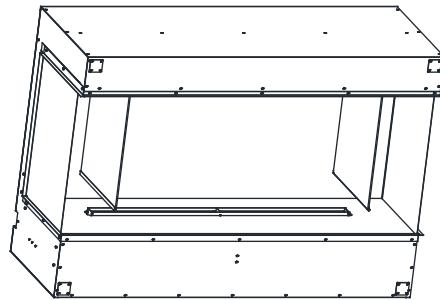


5. Remove the Tray Glass.

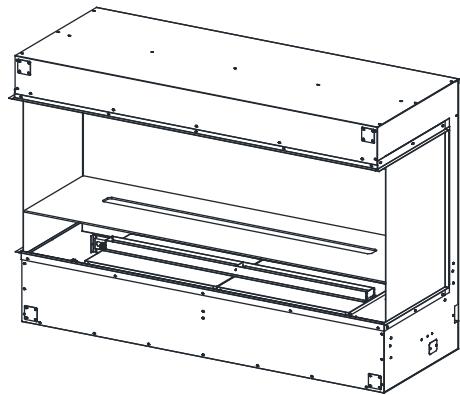


6. Put the cassettes in the appropriate position and wire them according to the instructions attached with the cassette.

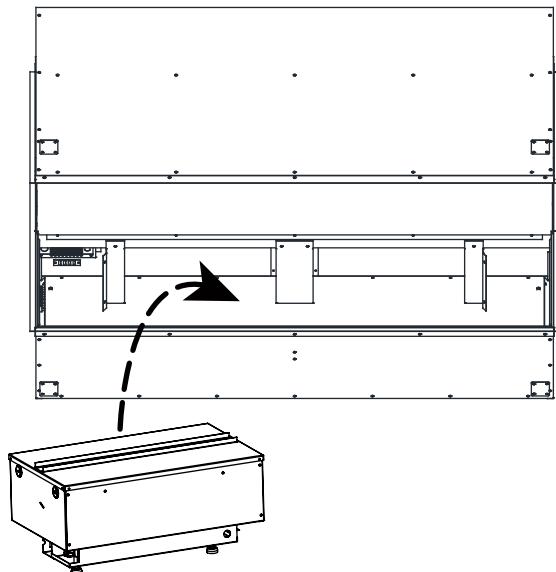


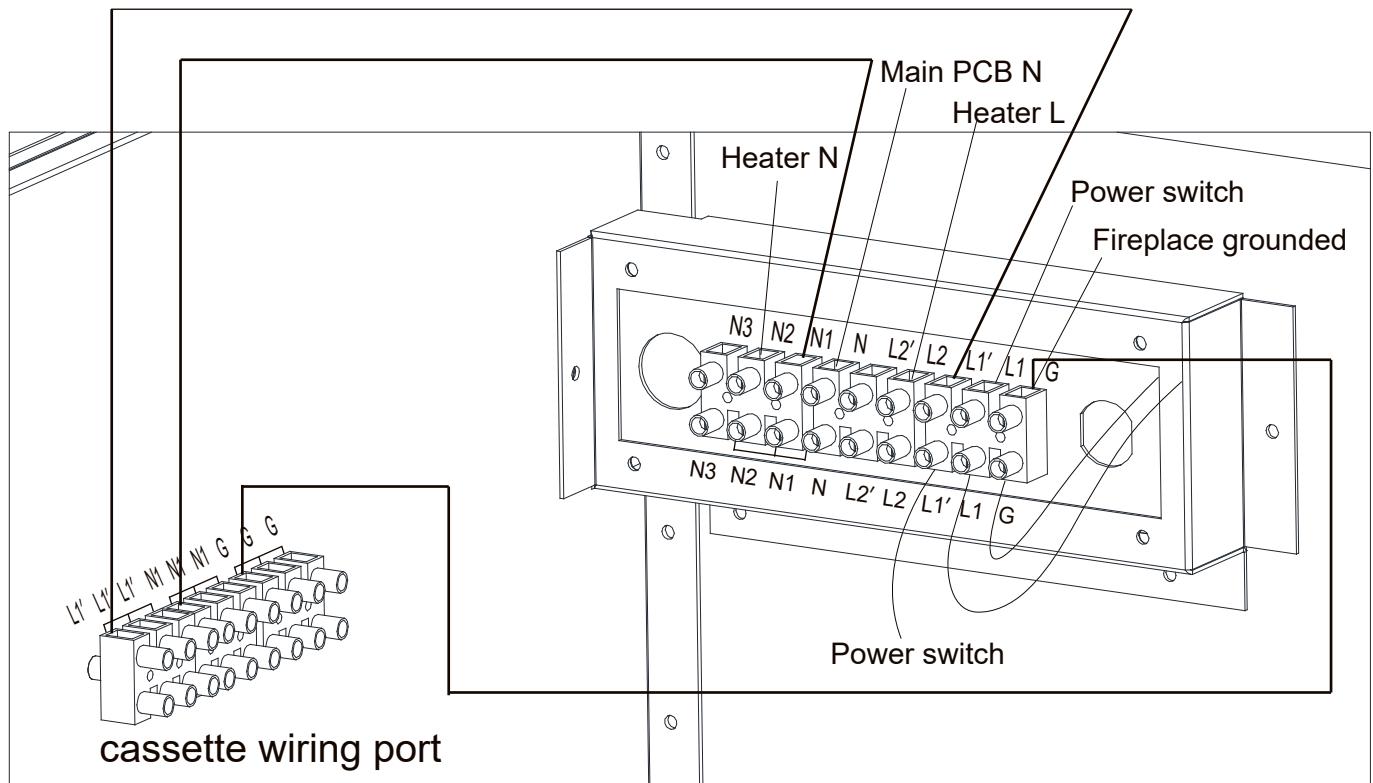

7. Install the shade cover onto the cassette.

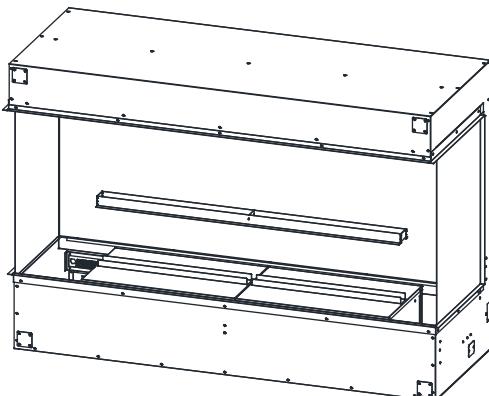

8. Insert the tray glass and black glass liners back in place. Pour the media into the tray. Feel free to use any combination of the fire glass media that you find most appealing. Reinstall the front glass.

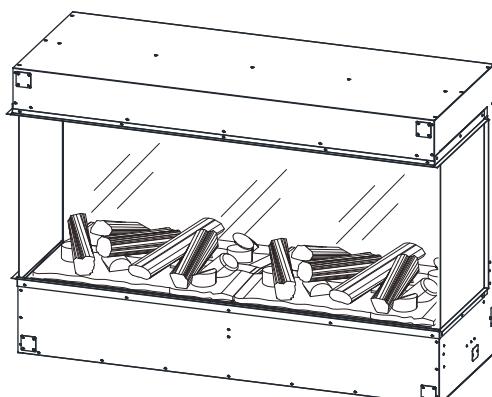

CASSETTE INSTALLATION

HOW TO INSTALL THE DIMPLEX OPTIMYST INTO THE AMANTII SIGNATURE FIREPLACE

To install the Dimplex Opti-Myst Cassette into your Amantii Signature Fireplace, follow these steps:

1. During the installation of the cassette into the amantii signature fireplace, ensure that you leave the cardboard inside to prevent it from getting scratched while installing the Opti-myst cassette.
2. The openings at the bottom of the unit can be utilized for running water lines and power lines to the cassette if desired.
3. In the next step, on the far back right side, you'll need to prepare your opti-myst cassette to be hardwired. Start by removing the electrical cover plate, which is secured by two screws.
4. Pull the wires out of the compartment, and at the bottom, you'll find two additional screws that you'll need to remove in order to pull the wiring component out of the unit.



5. You'll want to Wire the cassette into the Amantii Signature electric fireplace block so that the units can operate on a single cord. (Refer to page 14 in the manual for wiring diagram, as well as the link for further instructions from Dimplex:


<https://amantii.com/Optimyst/Installation%20Guide.pdf>)

6. The signature fireplace junction is located on the left side of the unit, while the Opti-myst cassette runs at the far right back. 3 cords is required to wire into the Signature fireplace to wire into the harness of the signature fireplace, requiring a min 14-gauge wire for connection for connection.



7. Once the cassette has been wired to the Amantii Signature fireplace, the cassette can then be placed into the Amantii Signature fireplace.

8. When placing the cassette into the Signature unit, simply slot it into the notches at the far back and slide it all the way in. Be cautious not to slide the box in too far to the front, as it may come into contact with the flicker assembly, potentially causing damage to the fireplace and generating undesirable noise.

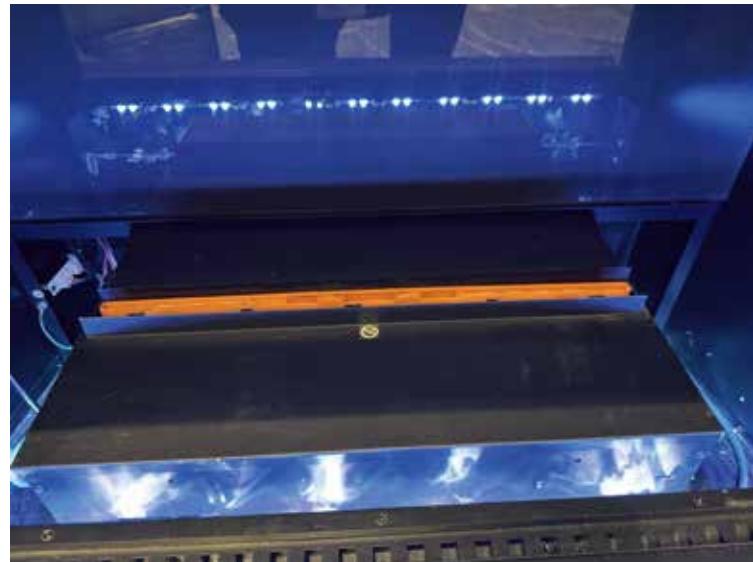

9. The cassette features leveling feet to use as necessary. The Amantii Signature Fireplace also features its own leveling mechanism to adjust as necessary.

10. Secure the cassette and install the cover plate on top of it.


11. **For additional installation guides, please scan the QR code provided.**



MANUAL OPERATION

The fireplace operates either by the touch panel located on the left front top side of the fireplace or by supplied remote control.

Ensure that the ON / OFF Power Switch on the fireplace is in the ON position.

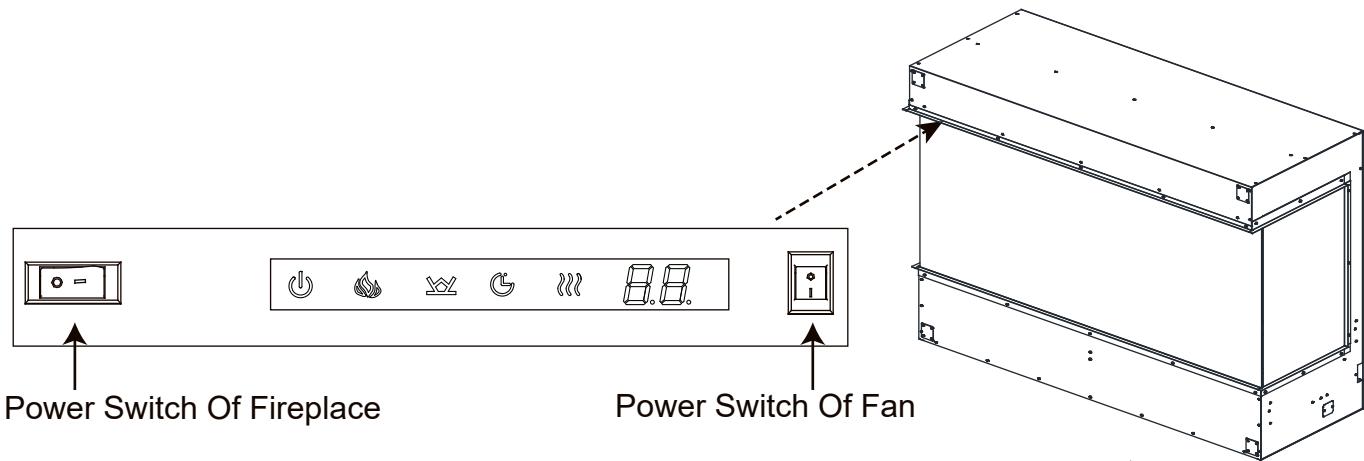

Touch the control panel once to “wakes up” the controls. This will cause the controls to light up. At this time, you can press the power button to turn on fireplace

1. Press “  ” to turn on and off the fireplace.
2. Press “  ” to adjust the flame brightness. There are 6 brightness levels (L6-L1) and an off(OFF) position. Each time the flame button is pressed, the brightness of the flame decrease. Press the flame button more than 5 seconds, the timer indicator light on and will rapidly blinks, at this time, you can use the TuyaSmart APP to connect to the fireplace.
3. Press “  ” to adjust the ember bed brightness. There are 7 brightness levels (d8-d2), dynamic condition(d1) ,and the OFF(OFF) setting you can cycle through. Each time the ember bed button is pressed, the brightness of the ember bed decrease.
4. Press “  ” for the first time to display the current timing. If the timing in off position, the second press will show 30. Multiple times to set operating duration to OF, 30 min, 1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h.

Press and hold the “  ” for 5 seconds to turn on the sound.

5. Press “  ” for the first time to display the current setting temperature , when the digital display stop blinks, press the button again to clear the current temperature. If the heater in off position, the second press will show 22°C(72°F). Multiple times to set ambient temperatures at 22°C(72°F), 23°C(74°F), 24°C(76°F), 25°C(78°F), 26°C(80°F), 27°C(82°F), 28°C(83°F), 15°C(59°F), 16°C(60°F), 17°C(62°F), 18°C(64°F), 19°C(66°F), 20°C(68°F), 21°C(70°F).

Temperature unit convert function: When the heater is on, press and hold the“  ” Button for 5 seconds, current temperature unit display will convert to another temperature unit.

NOTE: The heater is turned on by switching on the fan first, then after 5 seconds the heating coil. The heater is turned off by switching off the heating coil first, then after 30 seconds the fan.

REMOTE CONTROL OPERATION

For the remote to function make sure the fireplace is plugged in and the ON / OFF Power Switch on the fireplace is in the ON position and the remote has batteries.

Important: When operating the remote make sure you point the remote to the center of the fireplace. Each time you press the button, there will be a beep tone emitted.

Setting the current time of the remote control

You must press the  key to open the remote control and press the  key to enter the setting current time state. When one of the “Sun”“ Mon”“Tue”“Wed”“Thu”“Fri”“Sat” date is flashing, you can press the  or  key to select the current day of the week, and press the  key to confirm and enter hour setting. When the digital tube of time hour flashes, press the  or  key to set the current time and press the  key to confirm and enter minute setting. When the digital tube of time minute flashes, press the  or  key to set the current time and press the  key to confirm.



This Power Button turns the fireplace on and off. It has a memory function, press the power button once to turn power on. Pressing the power button again will turn the power off.



The Timer Button has adjustable setting at range from 30 minutes to 8 hours. As shown the following: 0:30- 1:00- 1:30- 2:00- 2:30- 3:00- 3:30- 4:00- 4:30- 5:00- 5:30- 6:00- 6:30- 7:00- 7:30- 8:00. Once you have set the timer, The  icon will be displayed on the LCD screen of the remote control. Press this button again, cancel the timing setting, and the  icon disappears.

When the timer is up, it will close all the functions and enter standby mode. In this mode, you should touch the power icon to restart the appliance.



Each time the Heater Button is pressed, the power of the heater will change. As shown the following: H1- H2- AUTO(22°C)- OFF(no display).

H1 means the blower work, but the heating coil don't. It is fan function.

H2 means the fireplace on High Heat.

AUTO means fireplace can automatically adjust to the temperature you set. When in AUTO, you can set the desired temperature with  or  keys. You can switch temperature unit between Celsius and Fahrenheit with  or  keys.



Each time Speed Button is pressed, the speed of the flame will change. Three options are available: Medium- High- Low.



The Moodlight Button turns the moodlight on and off. When in on position, the display screen of the remote control shows AD 1, when the number “1” flash, you can set the color of moodlight with Δ or ∇ keys. There are 10 different moodlight colors(AD1-10) and dynamic condition(AD11) to choose from.



The Ember Bed Button turns the Ember bed light on and off. When in on position, the display screen of the remote control default shows 1 0 0. You can press **R** or **G** or **B** keys to change the corresponding color.

R Each time the Red Button is pressed the brightness of the red color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.

G Each time the Green Button is pressed the brightness of the green color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.

B Each time the Blue Button is pressed the brightness of the blue color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.



The Flame Button turns the Flame on and off. When in on position, the LCD screen of the remote control default shows 0 1 6. You can press **R** or **O** or **Y** key to change the corresponding color.

R Each time the Red Button is pressed the brightness of the red color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.

O Each time the Orange Button is pressed the brightness of the orange color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.

Y Each time the Yellow Button is pressed the brightness of the yellow color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.



7 day timer function

NOTE: Ensure that the current time setting accurate, otherwise the effective time of the 7 day timer function will be different from what you set.

Press the key once, 7 days from Monday to Sunday will display on the LCD screen of the remote control, press key within 5 seconds to enter 7 day timer function . When “Sun” is flashing use the or key to select the day that you want to set, pressing the key to confirm. Then “ON” will be displayed on the LCD screen of the remote control, at the same time, the hour on the digital clock flashes, press the or key to set the hour and then the minute you want the fireplace to turn on. After setting the start up time, “OFF” will be displayed on the LCD screen. Use the or key to set the shutdown time the same as setting the start up time. After setting the shutdown time, “AUTO” will be displayed on the LCD screen of the remote control. The digital temperature flashes, at this time you can set the desired temperature with or keys. The fireplace will beep to acknowledge the settings. Now, the 7 day function has been set, the fireplace will save the setting and run automatically.

When the 7 day timer is set, the icon will be displayed on the LCD screen of the remote control. Press the key again to cancel the 7 day timer function, the will disappear.

NOTE: If the 7 day timing and general timing exist at the same time, the shutdown time shall be the earlier time. For example, it is now 6 am on Tuesday, turning on the heaters general timer for 4 hours, will have the shutdown time of 10 am. The previous 7 day shutdown time is 8 am on Tuesday, so today's heater shutdown time is 8 am instead of 10 am.

The Refer Button queries the 7-day timer setting. This will not turn on the timer function but will only show the previous setting. Press the or key to query the day of the week. Press the or key to query the start up and shutdown time.

Press key once to enter the query mode, press the key again to exit query mode.



This button turns the fire crackling sound on and off.

WIFI OPERATION

INSTALL TuyaSmart life

There are 2 ways to install TuyaSmart;

1. Search for “TuyaSmart life” in the APP store on your phone, download and install.
2. Scan the QR code below with your mobile phone.



WIFI SETTING AND FIREPLACE OPERATION

NOTE: Make sure the Bluetooth of your phone is turned on during the following steps.

1. Create an account and log in.
2. When you log in, touch “+” (FIG.1) to enter in FIG.2. Touch “Small Home appliances” on the left side and then choose “Electric Fireplace (BLE+Wi-fi)” to enter in FIG.3 to reset the device.

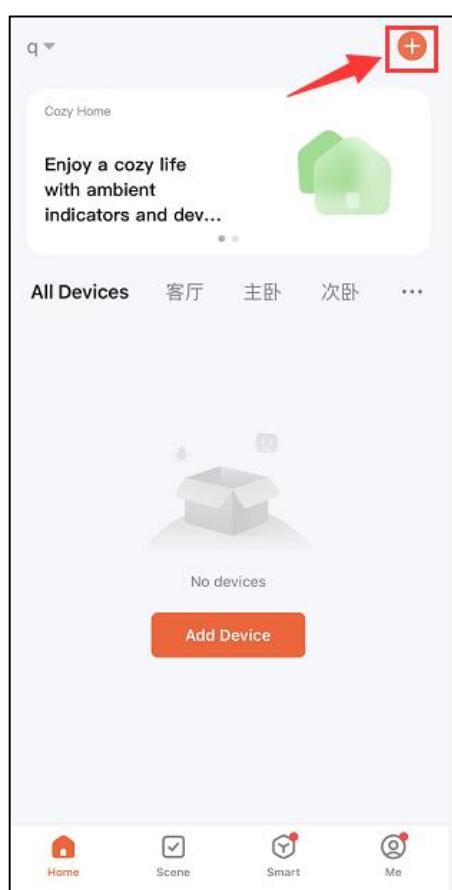


FIG.1

FIG.2

FIG.3

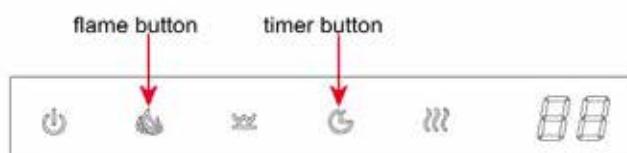


FIG.4

3. Press the flame button until the timer button flashes(FIG.4). Then confirm to go next to set your Wi-fi account and password (FIG.5). Please make sure the Wi-fi account and password you set are correct and Wi-fi signal is good.
4. The APP will search and recommend the devices automatically (FIG.6) for you to add to.
5. Touch “Done” to finish Wi-fi setting.(FIG.7)
6. Now you are in the interface like FIG.8. You can operate the fireplace via Wi-fi (FIG8/FIG9/FIG10/FIG11) .

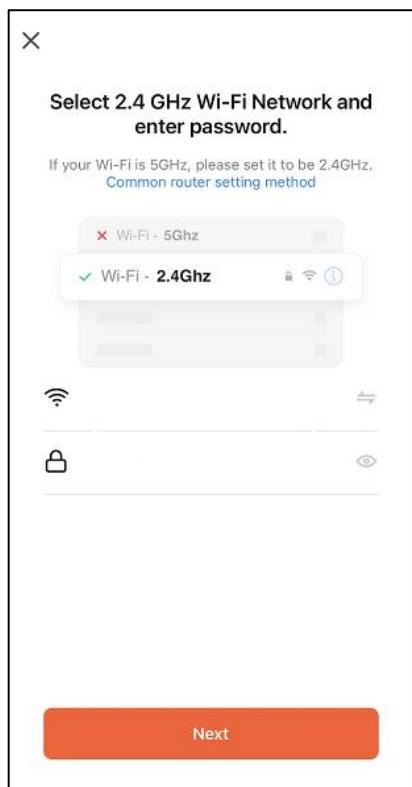


FIG.5



FIG.6



FIG.7



FIG.8


FIG.9

FIG.10

FIG.11

HOW TO PAIR YOUR BLUETOOTH SPEAKERS

1. Switch the toggle to the ON position.
2. Press and hold the Bluetooth speaker's power button for 2 seconds. You'll hear "Bluetooth On" from the speaker, and the indicator light will start flashing. To turn the speaker off, press and hold the power button again for 2 seconds, and you'll hear "Bluetooth Off."
3. Activate Bluetooth on your device and search for "Amantii" to connect.
4. Use the speaker controls to play music and adjust the volume.
5. If there is no activity for 10 minutes, the Bluetooth speaker will automatically turn off.

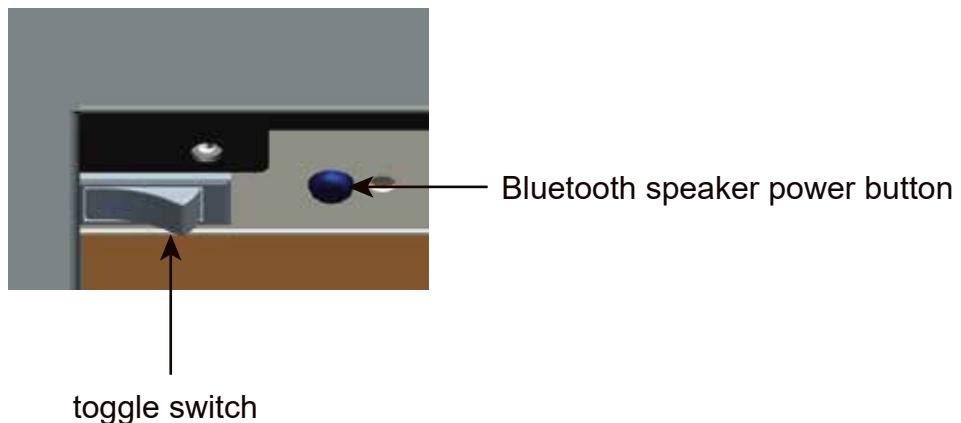

TROUBLE SHOOTING


Fault code	Fault Cause	Solution
E1	The heater overheating	Call after-sales service.
E2	NTC is defective.	Call after-sales service.
E3	The heater not working.	If the vents are dirty or clogged. Unplug the power, clean the dust and debris of the vent area. Wait for 5 minutes, plug in and turn on the heater. If the heater still don't work, please call after-sales service.

Each time the heater button is pressed in the E1 state, one beep tone will be given.



Each time the heater button is pressed in the E2 state, two beeps tone will be given.

Each time the heater button is pressed in the E3 state, three beeps tone will be given.

EXPLODED VIEW

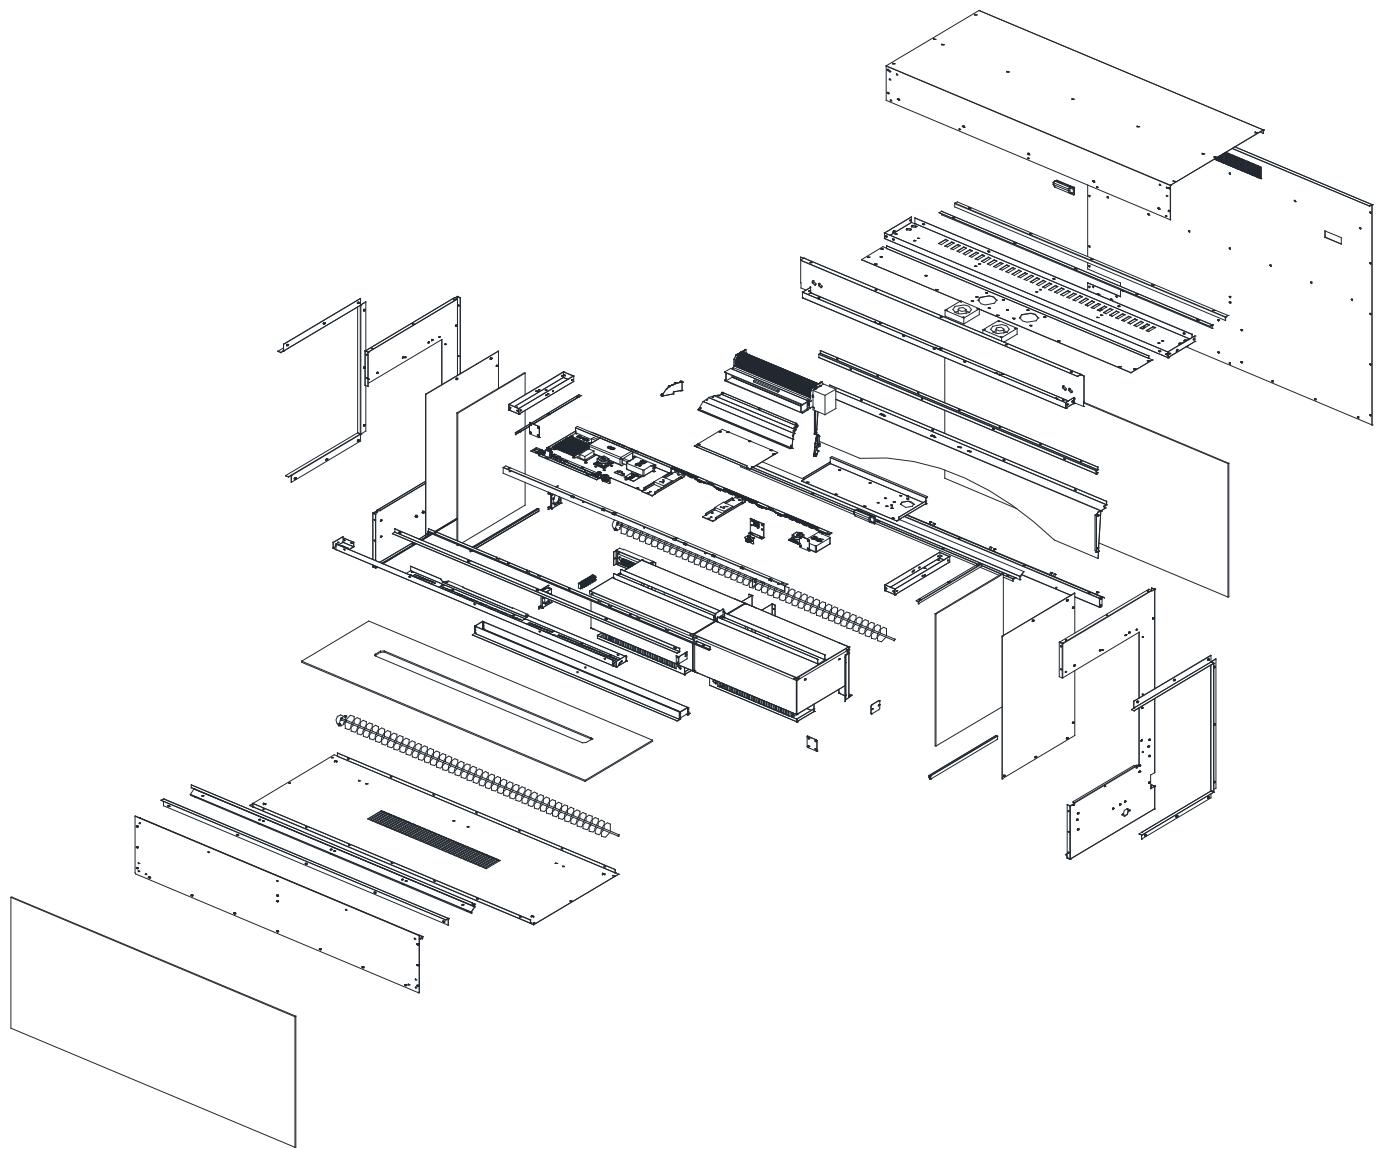

WIRING DIAGRAM

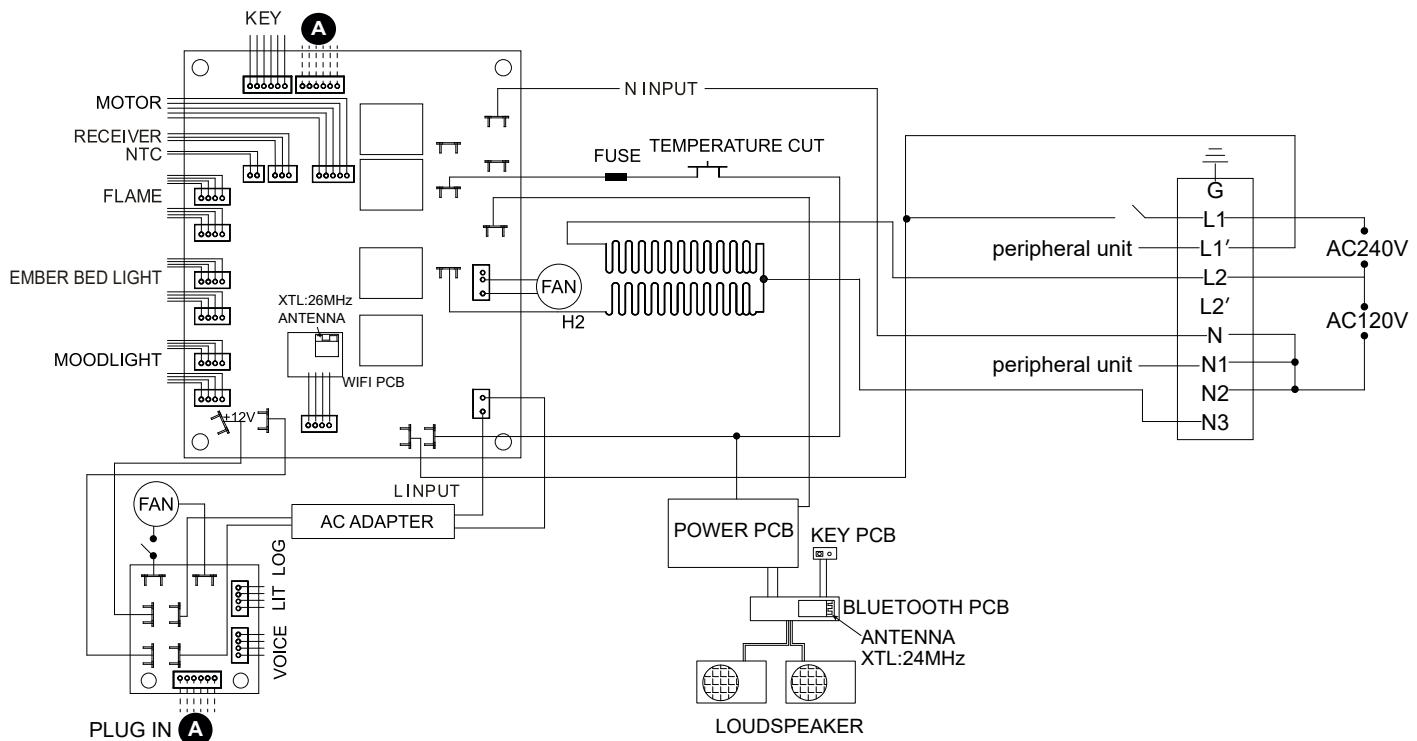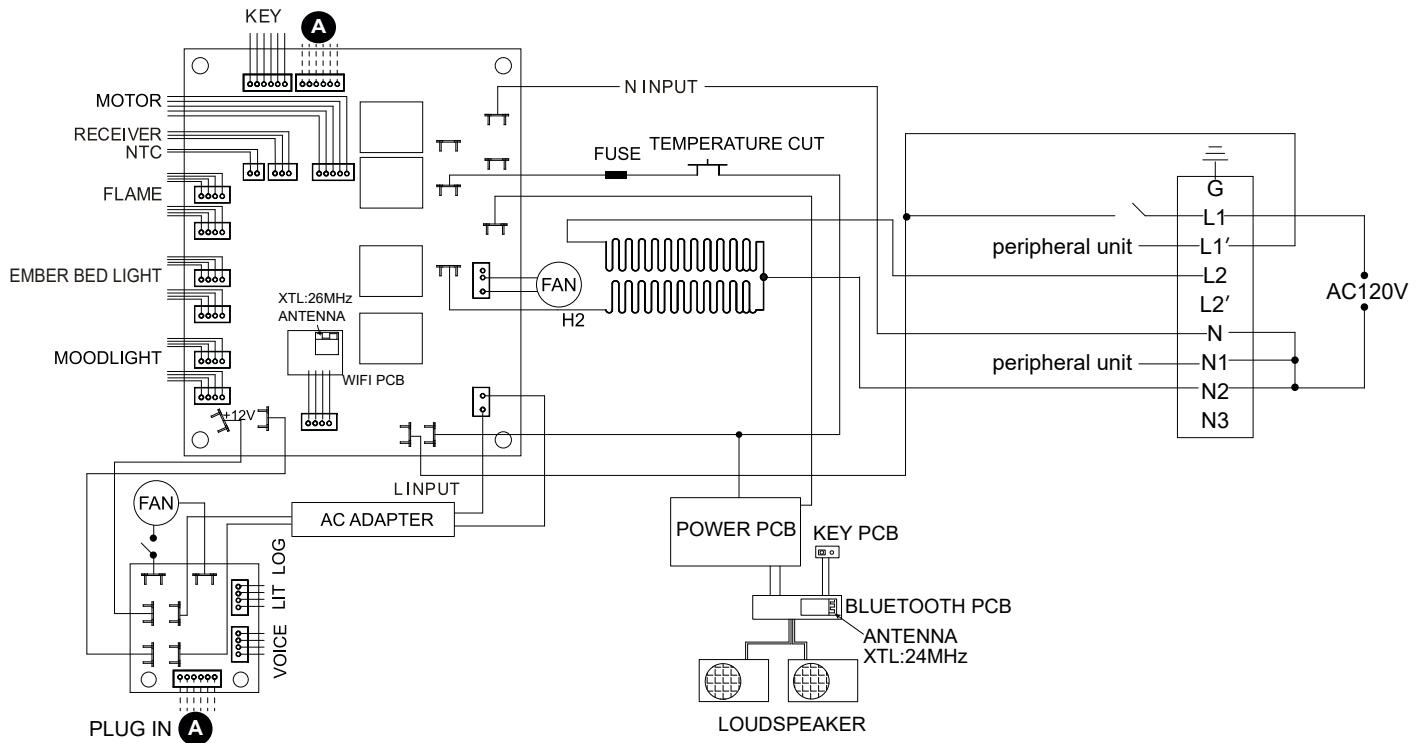

ELECTRIC FIREPLACE WARRANTY

FOR PRODUCTS MANUFACTURED AFTER JANUARY 1, 2016



Amantii Imports Corp. ("Amantii") warrants that your newly purchased Amantii electric fireplace is free from manufacturing and material defects for a period of two (2) years from the date of the first purchase, subject to the conditions and limitations contained below.

WARRANTY APPLICATION & EXCLUSIONS

This limited warranty applies to your newly purchased Amantii electric fireplace. The warranty is valid for purchases made in any province of Canada, any of the 50 states of the United States of America (including the District of Columbia), as well as in Australia and any country in Europe. Coverage under this limited warranty is available only to the original purchaser of the product and is non-transferable.

REPLACEMENT PARTS

Replacement parts for a unit out of warranty will have to be purchased and the purchaser is also responsible for the cost of shipping. For parts that are under warranty, there is no charge for parts or shipping. Parts will be shipped via standard mail service or added to future orders if timely. The Amantii warranty does not cover labor charges. The Amantii Warranty Form must be completed and returned

PRODUCTS EXCLUDED FROM THIS LIMITED WARRANTY

LED lights are not covered by this limited warranty and are the sole responsibility of the owner/purchaser.

WARRANTY COVERAGE AND TERM

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such product to be free from defects in material and workmanship for a period of two(2) years from the date of purchase of such product.

The limited two (2) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

Damage to trim kits caused by standing water is not covered under warranty. If such a situation arises, please contact our support line for assistance.

Any warranty part required will be freight collect.

WARRANTY COVERAGE AND TERM - BESPOKE SERIES

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such products to be free from defects in material and workmanship for a period of five (5) years from the date of the first purchase of such products.

The limited five (5) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

WARRANTY COVERAGE AND TERM - SIGNATURE SERIES

The warranty for the Signature Series includes a 2-year warranty provided by Dimplex for the Opti-myst, and the Amantii electric fireplace unit is covered by Amantii Electric Fireplace which is under 2 years warranty period.

LIMITATIONS TO COVERAGE UNDER LIMITED WARRANTY

This limited warranty does not apply to products that have been repaired, except by Amantii or its authorized service representatives, or otherwise altered. This limited warranty further does not apply to defects resulting from misuse, abuse, accident, neglect, incorrect installation, improper maintenance or handling, or operation with an incorrect power source. Products made by other manufacturers, sold with the product or thereafter, are not covered by this limited warranty. The use of unauthorized components will render this warranty null and void.

PANORAMA OUTDOOR UNITS

All Panorama units that are installed outdoors or in moisture intense conditions must use the stainless steel cover. Proof of purchase of the cover is required for any warranty claims.

SERVICE UNDER LIMITED WARRANTY

Defects must be brought to the attention of Amantii Technical Support by contacting Amantii at (1.877.850.9458), or at 502-1027 Davie Street, Vancouver, BC V6E 4L2. Please have your proof of purchase, catalogue/model and serial numbers available when calling; any and all service under the limited warranty requires a proof of purchase of the product.

DEFECTS

Should a product or part covered by this limited warranty be proven to be defective, in material or workmanship, and during the two (2) year limited warranty period, Amantii will replace such defective product or part without charge. If Amantii is unable to replace such product, or if replacement is not commercially practicable or cannot be timely done, in its sole discretion Amantii may, in lieu of replacement, choose to refund the purchase price for such product or part.

ELECTRIC FIREPLACE WARRANTY

FOR PRODUCTS MANUFACTURED AFTER JANUARY 1, 2016

LIMITATIONS

In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable to the purchaser or any third party, whether in contractin tort, or on any other basis for any indirect, special, punitive, exemplary, consequential, or incidental loss, cost or damage arising out of or in connection with the sale, maintenance, use or inability to use the product, even if Amantii,including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors,administrators and assigns, have been advised of the possibility of such losses, costs or damages, or if such losses, costs or damages are foreseeable. In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable for any direct losses, costs or damages that exceed the purchase price of the product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the purchaser.

APPLICATION OF PROVINCIAL AND STATE LAW

This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sale of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

GENERAL

Amantii reserves the right to make changes at any time without notice, in design, material, specifications, prices and the right to discontinue styles and products.

GLASS

This limited warranty does not apply to the following glass products:

Model Type	Tray Glass	Front Glass	Back Glass
Symmetry / Panorama	✓	✓	✓
Traditional (TRD)	✓	✓	✓
Tru View	✓	✓	✓
Freestand / Inserts	✓	✓	
WM - Wall Mount	✓		

EXCLUSION OF BATTERIES

Ocean carriers have set new rules designed to protect the safety of shipments while in transit. This new rule disallows the inclusion of lithium/alkaline batteries, as a result we will no longer be including batteries with the fireplace remote.

REPLACEMENT MOTORS

With the reliability of the components used in the construction of our electric fireplaces, a complimentary replacement motor will no longer be included inside the carton containing the fireplace.

Technical Support: 877.850.9458 - Ext 1
Customer Service: 877.850.9458 - Ext 5
Or email us at: cdn-service@amantii.com

