


Change the PC Board  
BI-SLIM Panorama Series

*Amantii*

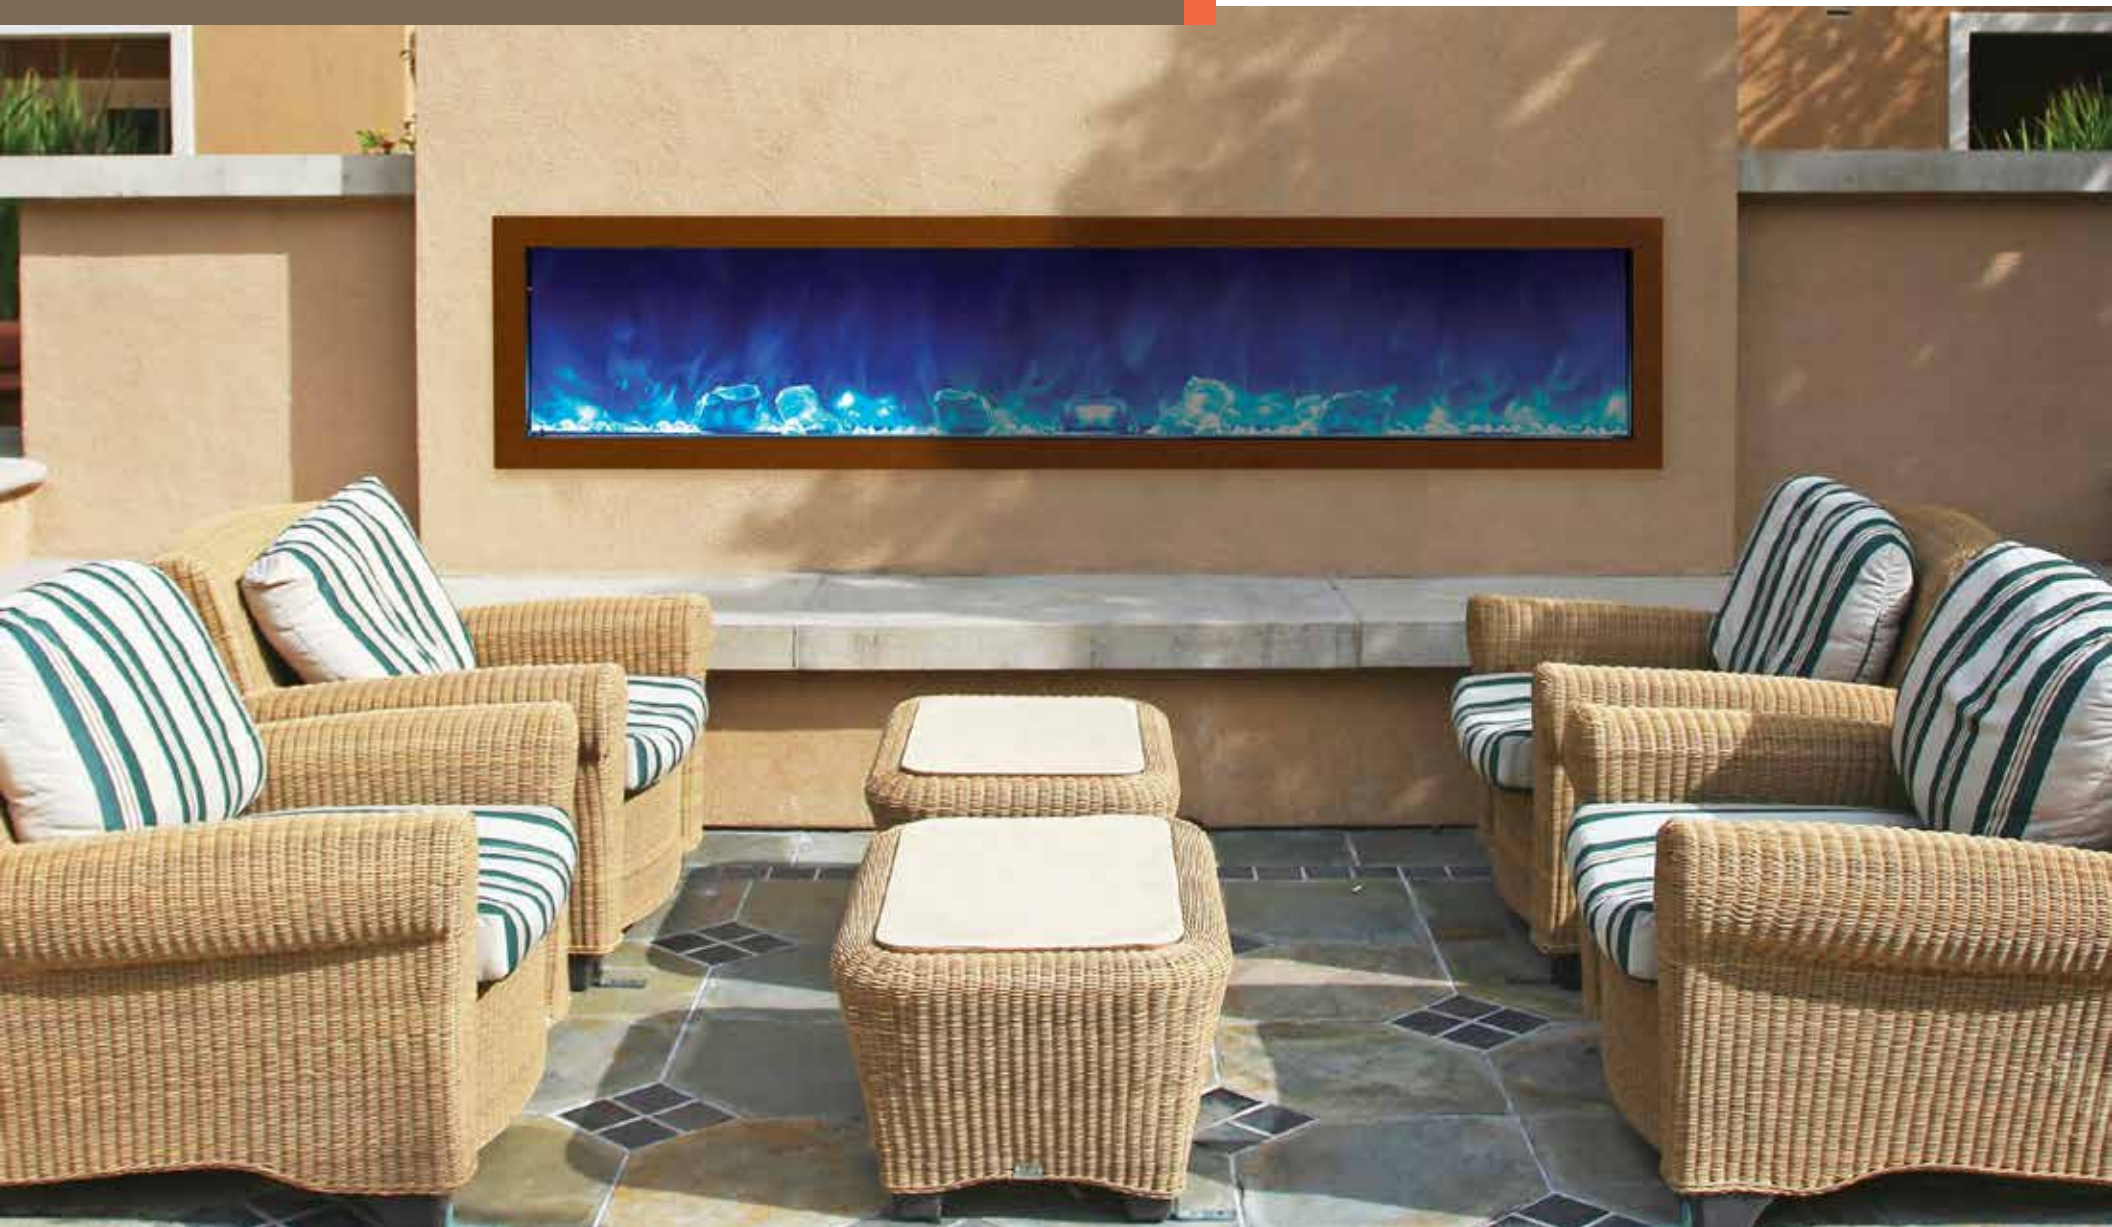

Models: BI-40-SLIM, BI-50-SLIM, BI-60-SLIM, BI-72-SLIM, BI-88-SLIM

1. Take off the front glass. Unscrew screw at the middle top and use the bracket from the unit to gently pull the glass forward. Take off the front glass.



*Amantii*



2. Take off the back and bottom glass. Unscrew 4 screws at both hand sides and take off the glass.



*Amantii*




3. Take off the PCB and heater assembly. Unscrew 8 screws at the left top and unplug wire from the PCB board. You can take off the whole assembly.

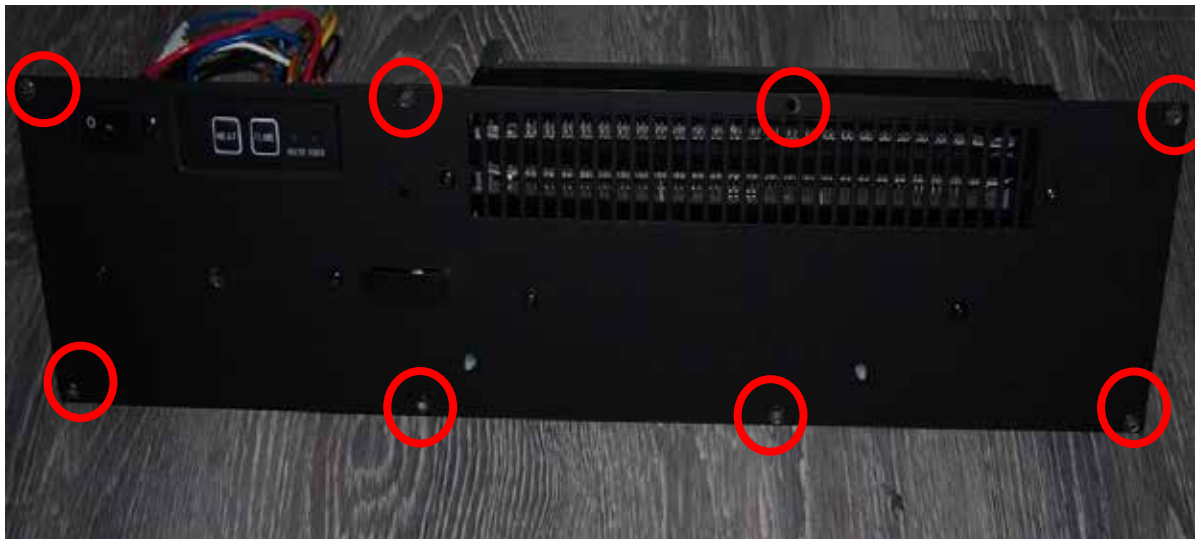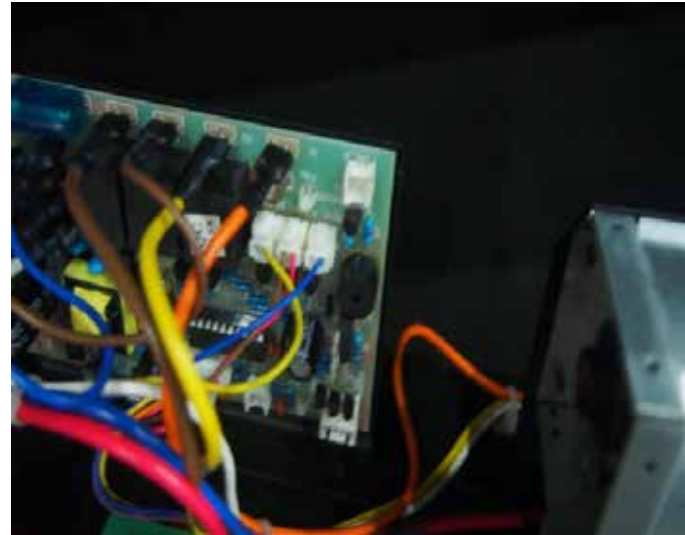

*Amantii*

4. Change the PCB board. You can see the PCB board and clip and release the four plastic parts. Unplug all the wires and replace the PCB board.

Put every thing back then you can enjoy your fireplace.

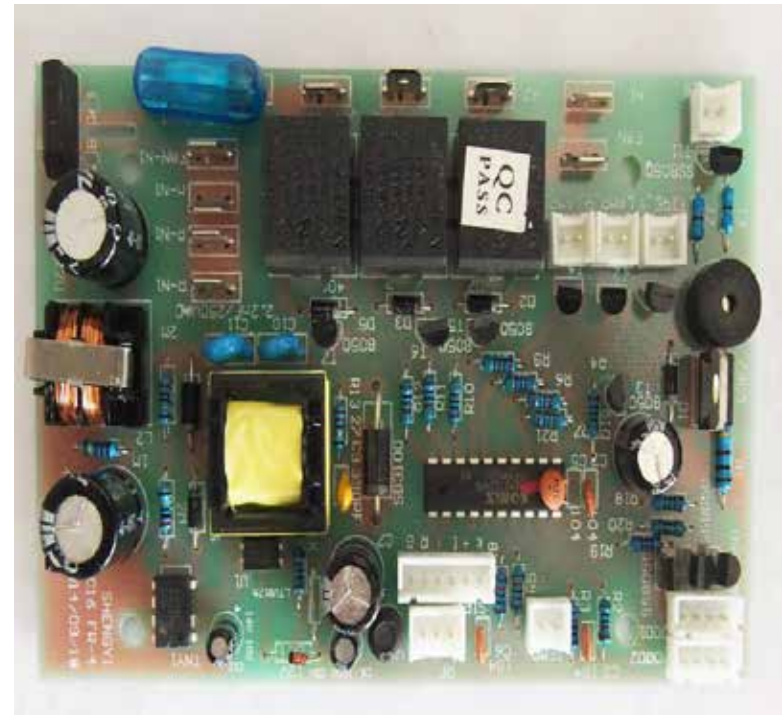

*Amantii*