

The Wooden Suite Assembly Instructions

Symmetry



Included Parts

- 1) Top and bottom plates (two long pieces)
- 2) Left and right side (two small pieces)
- 3) Face plate (bottom measurement is 2 ¼")
- 4) Spacer blocks to support back of unit
- 5) Screws

Tools Required for Assembly

Power Drill





ASSEMBLY INSTRUCTIONS

1) Lay face panel down with the screw holes showing.




2) Align one of the small side panels in the left groove of the face plate and fasten with provided screws. Duplicate the other side panel.



3) Align the bottom panel to the right groove of the face plate and fasten with provided screws.



4) Lay one of the panels with the slots facing up and align face and sides panels to top of the panel.

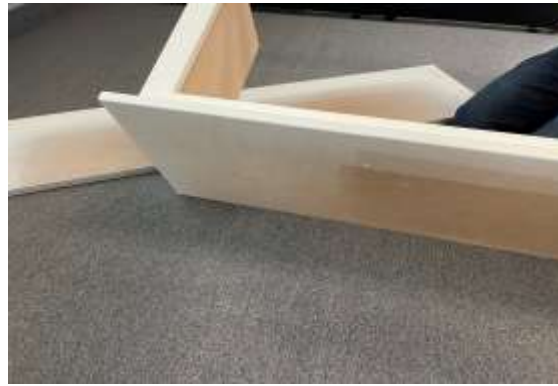

5) Use provided screws in each hole to fasten the face and sides to the panel.



6) Place top plate with slots facing down on top of the unit.



7) Use provided screws in each screw hole to attach pieces.

8) The bottom of the face plate has a measurement of 2 ¼”.

9) Attach support blocks to support backside of the fireplace.

10) Use the removed Tru View framing brackets/to secure unit onto the back side of the fireplace.



